

# LAN Phone 388 User's Manual

Revision information		
Version	Date	Description
V1.0	2006/09/18	1 <sup>st</sup> version
V1.1	2006/10/12	Modify keypad description, chapters, and some functions.
V1.2	200/03/06	Added some functions item.

# INDEX

<b>INDEX .....</b>	<b>1</b>
<b>Chapter 1 Specifications .....</b>	<b>5</b>
Network Interface .....	5
Power .....	5
LCD Display .....	5
Keypad .....	5
Features .....	5
Calling Features .....	6
Network .....	6
Configurations .....	6
Voice .....	6
Default Settings .....	6
1    Front appearance and Keypad Definition .....	8
2    Back Panel .....	11
3    Input Definitions .....	12
3.1 Keys with “123” number mode .....	12
3.2 Keys with “ABC” character mode .....	13
3.3 Keys with “abc” character mode .....	14
4    Menu keys .....	15
5    LCD Display .....	16
5.1 LCD Display in initializing mode .....	16
5.2 LCD Display in IDLE state .....	16
5.3 LCD Display in OFF-HOOK state .....	16
5.4 LCD Display in DISCONNECTED state .....	16
5.5 LCD Display for RINGING state .....	17
5.6 LCD Display for DIALING state .....	17
5.7 LCD Display for Incoming Call state .....	17
5.8 LCD Display in CONNECTED state .....	17
5.9 LCD Display in Call Waiting state .....	18
5.10 LCD Display for firmware upgrading mode .....	18
5.11 LCD Display for saving and rebooting mode .....	18
5.12 LCD Display for edit mode .....	19

6	Editing Display .....	20
6.1	Cursor.....	20
6.2	Insert the characters or numbers.....	20
6.3	Delete the characters or numbers.....	20
6.4	Rapid delete the characters or numbers.....	20
6.5	Exit the edit mode .....	20
7	LED Display .....	20

## **Chapter 3 Telephony Operation and Function.....23**

1	Power on and initialization .....	23
2	Making Calls.....	23
2.1	OFF-HOOK Dialing.....	23
2.2	Redial (OFF-HOOK Dialing) .....	23
2.3	Pre-Dial.....	23
2.4	Redial (ON-HOOK Dialing) .....	24
2.5	Dial during connected.....	24
2.6	Memory Dial .....	24
3	Answer Calls .....	24
3.1	Answer the call in the ringing state .....	24
3.2	Answer the call in the connect state.....	24
4	Hold and Retrieve Calls .....	24
5	Transfer.....	25
5.1	Consultant Transfer .....	25
5.2	Blind Transfer .....	25
6	Conference .....	26

## **Chapter 4 LCD Menu Operation.....27**

1	Call Records.....	27
1.1	Received.....	28
1.2	Dialed Calls .....	30
1.3	Missed .....	30
1.4	Delete All .....	30
2	Phone Book .....	30
2.1	New Entry .....	31
2.2	View Entry.....	32
2.3	Search Entry .....	33
2.4	Memory Check.....	33

3	Networking Setting .....	33
3.1	IP Mode .....	34
3.2	IP Address .....	34
3.3	Net Mask .....	34
3.4	Default GW .....	34
3.5	DNS Setting .....	34
3.6	PPPoE .....	35
3.7	SNTP .....	36
4	SIP setting.....	36
4.1	Proxy Setting .....	37
4.2	User Setting .....	37
5	Phone Setting.....	38
5.1	Alarm Setting .....	39
5.2	Ring Setting .....	41
5.3	Forward setting .....	41
5.4	Time setting .....	42
6	Mail Box .....	42
6.1	Information.....	42
6.2	MailBox No. ....	42
6.3	MailBox Key.....	42
6.4	Voice Mail Dial .....	42
7	Function Keys .....	42
7.1	New Entry .....	43
7.2	From PhoneBook.....	43
7.3	View Entry.....	43
8	Reboot .....	43

## **Chapter 5 Configuring the SIP Phone through Web Pages ....44**

Step 1.	Browse the IP Address predefined via Keypad .....	45
Step 2.	Input the login name and password .....	46
Step 3.	Enter the web interface main screen.....	47
Step 4.	Start to configure .....	47
4.1	Installation Wizard .....	48
4.2	Advanced Configuration.....	53
4.3	System Status.....	74
4.4	Reboot .....	76

## Chapter 6 Configuring through Telnet command lines.....77

1. [help] command.....	78
2. [quit] command.....	79
3. [debug] command.....	79
4. [reboot] command .....	79
5. [pbook] command.....	79
6. [commit] command.....	80
7. [ping] command.....	80
8. [time] command.....	81
9. [ifaddr] command.....	81
10. [pppoe] command.....	83
11. [flash] command .....	84
12. [sysconf] command .....	84
13. [sip] command.....	86
14. [security] command .....	87
15. [line] command.....	88
16. [voice] command .....	89
17. [phone] command.....	90
18. [tos] command.....	91
19. [prefix] command.....	92
20. [rom] command .....	92
21. [auth] command.....	93
22. [passwd] command .....	94

# Chapter 1 Specifications

## **Network Interface**

- PC: connect to PC, the interface type is RJ45
- LAN: connect to network, the interface type is RJ45

## **Power**

- Input: AC 110 – 220v
- Output: DC 9V/1A

## **LCD Display**

2 × 16 characters

## **Keypad**

38 Keys

- 2 keys for the OK or Cancel function
- 4 navigation keys for the menu setting
- 12 keys for the number dialing
- 2 keys for the volume setting
- 1 key for the hand free function
- 13 keys for the call features control
- 2 keys for the line operation

## **Features**

- Do Not Disturb
- Mute
- User-defined function keys
- Speed Dial function keys.
- Phone Books: 90 entries
- Call Log: 10 missed calls, received calls, dialed calls
- Pre-dial
- Redial
- User-defined function key: F1~F3.
- Volume: 10 Levels (1 ~ 10)
- Ring Volume: 7 Levels (1 ~ 7)
- Ring Method: 3 rings, melody
- Key Tone

- Date / Time: Display date and time in idle state (SNTP)
- Alarm Clock: 3 alarm clocks

## **Calling Features**

- Call waiting
- Call Conference (3-way): Local Conference
- Call hold / retrieve
- Call forward (Busy, No-Answer and Unconditional)
- Call transfer (attended / unattended)
- Call pickup (Group Pick up & Specific Pick up)
- MWI

## **Network**

- Two 10/100Mb Ethernet with full duplex (RJ-45)
- Support Static IP / DHCP / PPPoE
- Software remote upgrade through TFTP/FTP server

## **Configurations**

- Keypad configuration with the LCD menu
- Web Browser Configuration
- Telnet Configuration

## **Voice**

- DTMF detection and generation
- Acoustic Echo cancellation
- G.711a/u-Law, G.729
- Jitter buffer control
- DTMF via RFC2833
- SIP INFO for DTMF

 

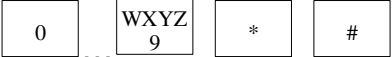
 

 











## **Default Settings**

- IP: 10.1.1.3
- Net Mask: 255.255.0.0
- Default Gateway: 192.168.1.254
- SIP Proxy: 10.1.1.2
- SIP account: 1001
- SIP Port: 5060
- Proxy Port: 5060

- RTP Port: 16384
- Digit Timeout: 5 s
- Call waiting: On
- Call transfer: On

     
## 1 Front appearance and Keypad Definition



Keypads	Function description
	1. Cancel for the menu setting or number typing. 2. Reject the incoming calls
	OK for the menu setting
	Number, * and # keys
	Reduce the voice volume
	Hands free and Handset switching key
	Enhance the voice volume
	UP arrow key
	Left arrow and return key for the menu setting
	1. Right arrow 2. Enter key for the menu setting
	1. Down arrow key 2. Enter Phone Book directory
 Line 1	Line1 switch key
 Line 2	Line2 switch key
 F1	Memory Function key 1
 F2	Memory Function key 2
 F3	Memory Function key 3
 Forward	Enter Unconditional Forward directory
 DND	DND function key

<input type="checkbox"/> Missed	Missed calls key
<input type="checkbox"/> VMS	Voice Mail System key
<input type="checkbox"/> Blind Tran.	Blind transfer Key
<input type="checkbox"/> Mute	Mute key
<input type="checkbox"/> Headset	Headset mode switch key
<input type="button" value="Conf"/>	Conference key
<input type="button" value="Pick"/>	Call Pick Up key
<input type="button" value="Trans"/>	Transfer key
<input type="button" value="Redial"/>	Redial key
<input type="button" value="Hold"/>	Call hold / Call retrieve key


## 2 Back Panel

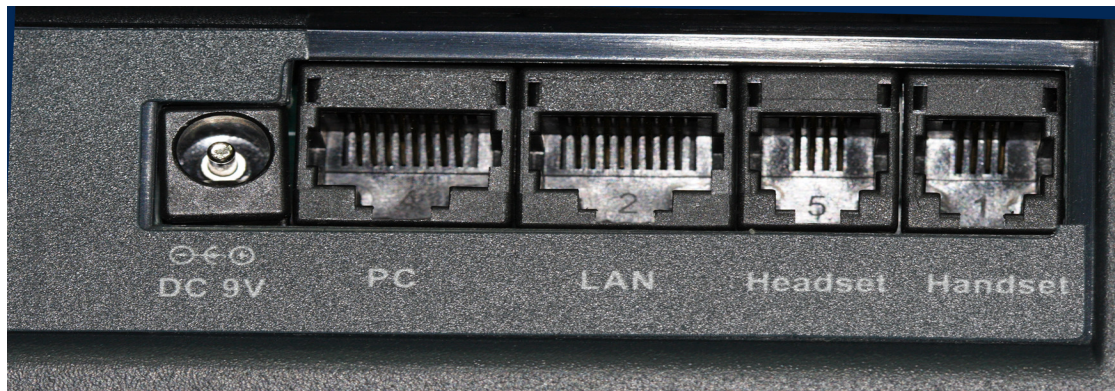

- ◆ **DC 9V:** DC 9V power input outlet
- ◆ **PC:** RJ-45 connector, connected directly to the **PC** through the **straight** CAT-5 cable
- ◆ **LAN:** RJ-45 connector, connected directly to the **Hub** through the **straight** CAT-5 cable.
- ◆ **Headset:** headset jack to connect with headset. Please contact with your distributor for optional headset.
- ◆ **Handset:** handset jack to connect with handset.

 
 
 
 
 
 
 
 
 

 
 
### 3 Input Definitions

This phone could support three methods for the text input, such like this: “123”, “ABC”, “abc”. “123” is for the number inputs, “ABC” is for the uppercase character inputs; “abc” is for the lowercase character inputs.


User could press the  button to exchange these three methods.


#### **3.1 Keys with “123” number mode**

   
 
 

 
 
 
 
 
 
 
 
Users could only enter the digits in the “123” mode as following:

Key	Numbers in “123” input method
	<b>1</b>
	<b>2</b>
	<b>3</b>
	<b>4</b>
	<b>5</b>
	<b>6</b>
	<b>7</b>
	<b>8</b>
	<b>9</b>
	<b>.</b>
	<b>0</b>
	<b>Input method switch key</b>


### 3.2 Keys with “ABC” character mode

  
Users could enter the characters with the uppercase in this mode. The key  could only input the special symbols and press more times to pick up the symbols you want. If

 
 
 
 
 
 
 
 
 
 
 
 
users press two times on the key , the input character will be E.

Key	Characters with uppercase in “ABC” input method
	. , : ; / - _ @ & ? ! ' "
	A B C
	D E F
	G H I
	J K L
	M N O
	P Q R S
	T U V
	W X Y Z
	* + / ( ) < = > % ¥ £ \$
	Space
	Input method switch key

### 3.3 Keys with “abc” character mode






 
Users could enter the characters with the uppercase in this mode. The key  could only input the special symbols and press more times to pick up the symbols you want. If

users press two times on the key , the input character will be e.

Key	Characters with uppercase in “ABC” input method
	. , : ; / - _ @ & ? ! ' "
	a b c
	d e f
	g h i
	j k l
	m n o
	p q r s
	t u v
	w x y z
	* + / ( ) < = > % ¥ £ \$
	Space
	Input method switch key

## 4 Menu keys

There are four keys to help users enter, exit or pick up the configuration tables for changing. Please check out the following info:

Key	Functions descriptions
	Press the right arrow key in the IDLE mode to enter the main menu.
	Press the left arrow key will help users to return the original table or exit the main menu
	Press the up arrow key to scroll up configuration items.
	1. Press the down arrow key to scroll down configuration items. 2. Enter Phone Book directory.
	Enter the selected configuration table.
	Return to the original table or exit the main menu key.

## 5 LCD Display

### 5.1 LCD Display in initializing mode

1970/01/01 00:00  
Initializing...

Status during the system initializing

### 5.2 LCD Display in IDLE state

2006/05/10 10:10  
<line number>

Displaying in the IDLE mode while the network and registration were ok. (User can change display name from SIP configuration, if user doesn't input display name date it will display its Line number)

2006/05/10 10:10  
Register Fail

Registrations fail during the IDLE mode

2006/05/10 10:10  
Network Fail

Network fail during the IDLE mode (LAN port detection or get IP failed with DHCP and PPPoE)<sup>1</sup>

### 5.3 LCD Display in OFF-HOOK state

Line 1 Dial...

LCD displaying while the phone was in the OFFHOOK state.

Line 2 Dial...

LCD displaying while the phone was in the OFFHOOK state.

### 5.4 LCD Display in DISCONNECTED state

---

2006/05/10 10:10  
<Line number>

After the remote side sends the BYE message, LP388 will automatically return IDLE state.

### **5.5 LCD Display for RINGING state**

Incoming call...  
208

Incoming call with the calling name or number

### **5.6 LCD Display for DIALING state**

Line 1 Dialing...  
9999

Making a outgoing call with the dialed number

Line 2 Dialing...  
9999

Making a outgoing call with the dialed number

### **5.7 LCD Display for Incoming Call state**

Jason  
65605

When it received incoming call, it will show incoming call display name and phone number

### **5.8 LCD Display in CONNECTED state**

Line 1 Talking...  
00:00:10

During the talking state and running the timer

Line 2 Talking...  
00:00:10

During the talking state and running the timer

Mute...  
00:00:10

The timer will still go on while the mute function was enabled during the conversation.

Transfer...	Transfer action during the call.
Hold...	Hold the established call.
In Conference..... 00:10:10	Enable the conference function and start the timer from the beginning.

### **5.9 LCD Display in Call Waiting state**

Line 1 Talking..... 65605	<p>Under conversation and LP388 received incoming call. LCD of LP388 will display incoming call number and hears call waiting tone.</p> <p>User can press blinking Line button to pick up call waiting or presses C button to reject call waiting.</p>
------------------------------	--

### **5.10 LCD Display for firmware upgrading mode**

Download...	Firmware file downloading mode
Download... Writing...	Writing the firmware after the firmware downloading
Completed... Please reboot	Request for the rebooting after the firmware upgrading



### **5.11 LCD Display for saving and rebooting mode**

Saving...	Saving the configurations while users had be changed
-----------	--

Rebooting...	Users reboot this unit from the remote side
Rebooting?	Request for the keypad pressing to reboot
Please Wait...	Users reboot this unit by the keypad pressing

## 5.12 LCD Display for edit mode

The characters and digits were entered from the left to the right side. The cursor will be blinking every 500ms just like the example as above:

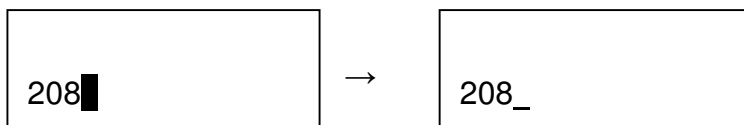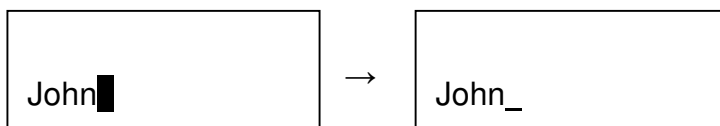

If the users enter the incorrect info, the LCD will show as following:

Invalid Input...

## 6 Editing Display

### **6.1 Cursor**

Under the characters or digits, the cursor will be displayed and the characters or digits will be blinking. It was shown as “\_” with the LCD showing. Users could press the right or left arrow keys to make the cursor move to the right or left side. The blinking time for the on and off will be 500ms.

 
### **6.2 Insert the characters or numbers**

All the characters and numbers were entered from the left to the right side. While users enter a new character, the cursor will move to the right side of the entered character or numbers and wait for the next one.


### **6.3 Delete the characters or numbers**

User could use the cancel key for erasing the entered characters or digits. It will only erase the characters or digits, which are in the left side of the cursor.

### **6.4 Rapid delete the characters or numbers**











All the info will be dropped while users press the keypad  for 3 seconds and all the entered info will be deleted and exit the edit mode.



### **6.5 Exit the edit mode**

Users could press the keypad  for 3 seconds to exit the edit mode during the editing. Or move the cursor to the left side of the LCD and without any characters and numbers; press the cancel key to exit the edit mode.

## 7 LED Display

While users power on this phone set, all the LED will be lighted up before the system initializing procedure finished. The function LED will be light while users press the function keys; and will be blink while users press the function keys for twice. The following definitions are for the LED:

LED	Function description
System Indicator LED	<ol style="list-style-type: none"> <li>1 Flashing for register fail and network fail. Flash time: 200ms on; 200ms off</li> <li>2 Lighting for the OFF HOOK.</li> </ol>
 Line 1	<ol style="list-style-type: none"> <li>1 Flashing for the line holding and incoming call. Flash time: 500ms on; 500ms off</li> <li>2 Lighting for the line in use.</li> </ol>
 Line 2	<ol style="list-style-type: none"> <li>1 Flashing for the line holding and incoming call. Flash time: 500ms on; 500ms off</li> <li>2 Lighting for the line in use.</li> </ol>
 F1	Light up while user had configured data in this function key.
 F2	Light up while user had configured data in this function key.
 F3	Light up while user had configured data in this function key.
 Forward	<ol style="list-style-type: none"> <li>1. Light up while user enabled forward function (unconditional/ No Answer/ Busy).</li> <li>2. Light off when user disable forward function.</li> </ol>
 DND	<ol style="list-style-type: none"> <li>1. Light up while users enable the DND function</li> <li>2. Light Off while users disable the DND function</li> </ol>
 Missed	<ol style="list-style-type: none"> <li>1. Light up while user has missed call.</li> <li>2. Light Off while users checked out the miss called records</li> </ol>
 VMS	<ol style="list-style-type: none"> <li>1. Light up while users have the voice mail</li> <li>2. Light Off while users checked out the voice mail records</li> </ol>
 Blind Tran.	<p>Press during communication to do blind transfer.</p> <ol style="list-style-type: none"> <li>1. A communicate with B→<b>Blind Tran.</b> + C's number→hear nothing (C ring) → Blind transfer</li> <li>2. A communicate with B→<b>Blind Tran.</b> + C's number→C Busy → hear special tone then retrieve B immediately</li> <li>3. A communicate with B→<b>Blind Tran.</b> + C's number (not</li> </ol>

	finished) → <b>Blind Tran.</b> Retrieve call
 Mute	<ol style="list-style-type: none"> <li>1. Light up while users enable the mute</li> <li>2. Off while users cancel the mute</li> </ol>
 Headset	<ol style="list-style-type: none"> <li>1. Light up when user is using headset mode.</li> <li>2. HEADSET button works the same like hook/speaker button. When having incoming call, press HEADSET button can pick up call and press again can hang up call.</li> <li>3. When in communication, press HEADSET button can switch voice path to headset.</li> </ol>

# Chapter 3 Telephony Operation and Function

## 1 Power on and initialization

During the initialization procedure:

- 1 All the LED will light on till the initialization procedure was finished.
- 2 All the LED will light on if there is error during the procedure.
- 3 On LCD will show "Initializing".

## 2 Making Calls

There are some ways to make outgoing calls:

- 1 OFF HOOK Dialing
- 2 Redial (OFF-HOOK Dialing)
- 3 Pre-Dial (ON-HOOK Dialing)
- 4 Redial (ON-HOOK Dialing)
- 5 Dial during connected
- 6 Memory Dial

### 2.1 OFF-HOOK Dialing

The maximum digit is 32. But users enter more than 16 digits, the number will move on the LCD displaying. User can press Speaker button, pick up handset, or press line button to


 
dial out. The  button could delete the digits.

### 2.2 Redial (OFF-HOOK Dialing)

User can press redial button during off-hook mode, phone will dial out the latest record of the dialed list.

### 2.3 Pre-Dial

User can press the numbers while the phone is in the IDLE state then pressing the

 button will change to OFF-HOOK state and dial out this number. The  button could delete the digits as same as the OFF-HOOK dialing mode.



During the Pre-dial function:

- 1 This is permitted to enter and dial out the digits "\*" and "#".
- 2 If the dialed number could be matched with the list in the phone book, LCD will display

 
 
the name of this record.

## **2.4 Redial (ON-HOOK Dialing)**

This will show all the records of the dialed list. After the records selected, pressing the

 or  button, the number will be dialed out.

## **2.5 Dial during connected**

Pressing the  or  buttons could switch the Line 1 and Line 2. If the Line 1 was connected, it will be put on hold.

If the line has been put on hold, it can not dial out another call.

## **2.6 Memory Dial**

The memory dial function could support the dialing from the IDLE or OFF-HOOK state. User can press memory function key or make phone off-hook first to dial out memory key.

 
 
# **3 Answer Calls**

The LCD will show up the name if the incoming calls could be matched with the records from the phone book; or show the phone number if couldn't find out the records.

## **3.1 Answer the call in the ringing state**



User can press Speaker button, Line button, or pick up handset to answer the incoming call.

## **3.2 Answer the call in the connect state**

During the call was established, press the button  and  to hold the current line and answer another incoming call.

# **4 Hold and Retrieve Calls**

  There are two ways to hold the current calls and retrieve them back:

- 1 Press another idle line button  or  to hold the current line and switch to another IDLE line.
- 2 Press the Hold function keys to hold the current calls.

During the hold status, the LED of Line will flash.

## 5 Transfer

388 could support the call transfer with two types, one is the Consultant, and another is the Blind transfer.

The transfer could be initialized only for the state as above.

- i Dial another call during the connect state
- ii Answer another call during the connect state

### 5.1 Consultant Transfer

Consultant Transfer scenario:

- A. A communicate with B → **Tranf** or **Line** hear dial tone+ C's number → C pick up → A hangs up → B communicate with C
- B. A communicate with B → **Tranf** or **Line** hear dial tone+ C's number → C busy/ring → **Tranf** or original **Line** → Retrieve call with B
- C. A communicate with B → **Tranf** or **Line** hear dial tone+ C's number → C reject → **Tranf** → Retrieve call with B
- D. A communicate with B → **Tranf** or **Line** hear dial tone+ C's number → C reject → press **Line** to hang up C and hear dial tone again → press original **Line** to retrieve call
- E. A communicate with B → **Tranf** or **Line** hear dial tone+ C's number → C ring → A hangs up → Blind transfer

### 5.2 Blind Transfer

Blind Transfer Scenario:

- A. A communicate with B → **Blind Tran.** + C's number → hear nothing (C ring) → Blind transfer
- B. A communicate with B → **Blind Tran.** + C's number → C Busy → hear special tone then retrieve B immediately
- C. A communicate with B → **Blind Tran.** + C's number (not finished) → **Blind Tran.** Retrieve call

## 6 Conference

User needs to specify conference function to be local conference or server-based conference.

Conference Scenario:

A. Local Conference:

- (1) A communicate with B → **Conf** or **Line** hear dial tone+ C's number → C pick up → press **Conf** again to build conference
- (2) A communicate with B → **Conf** or **Line** hear dial tone+ C's number → C refuse to join conference → press **Line** to hang up C and hear dial tone again → press original **Line** to retrieve call

B. Server-based Conference:

A communicate with B → **Conf** implement sever-based conference scenario

## Chapter 4 LCD Menu Operation

During the menu operation, there is no cursor for the configuration tables selecting. The LCD will show just like this:

>Call Records  
Phone Book

Users could press the up or down arrow keys to move on different item. This sign will guide you to choose the configuration tables. In the main menu, it will exit the menu and back to the IDLE mode if there is no action for 30 seconds.

The LCD menu includes eight tables in the menu tree: Call Records, Phone Book, Networking setting, SIP setting, Phone setting, Mail Box, Function Keys, and reboot.


 
### 1 Call Records


- Received Calls
  - Call Record List
    - ◆ Dial Out
    - ◆ Detail
    - ◆ Add to Book
    - ◆ Delete
- Dialed Calls
  - Call Record List
    - ◆ Dial Out
    - ◆ Detail
    - ◆ Add to Book
    - ◆ Delete
- Missed Calls
  - Call Record List
    - ◆ Dial Out
    - ◆ Detail
    - ◆ Add to Book
  - Delete
- Delete All
  - Delete all?

This phone set could support 10 entries for the received / dialed / missed calls.


The sorting will be based on the latest period. If there could be matched with the phone book, LCD will show the name; or show the number only.

## 1.1 Received


Showing the received calls; pressing the  and  button to check out the other received calls.

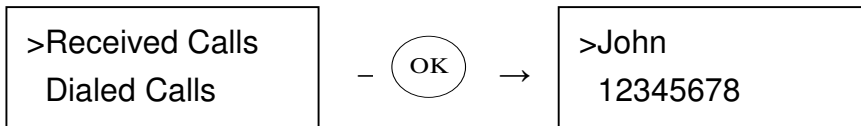

The LCD will show as following while there is no any record for the received calls:

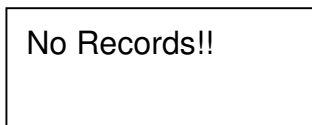


### Dial out

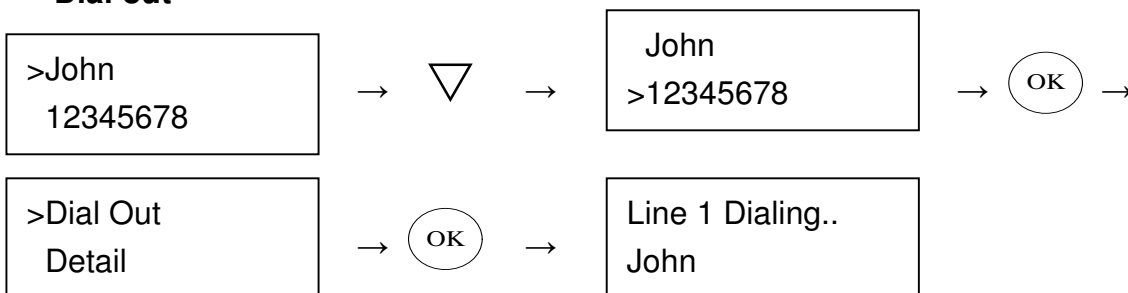


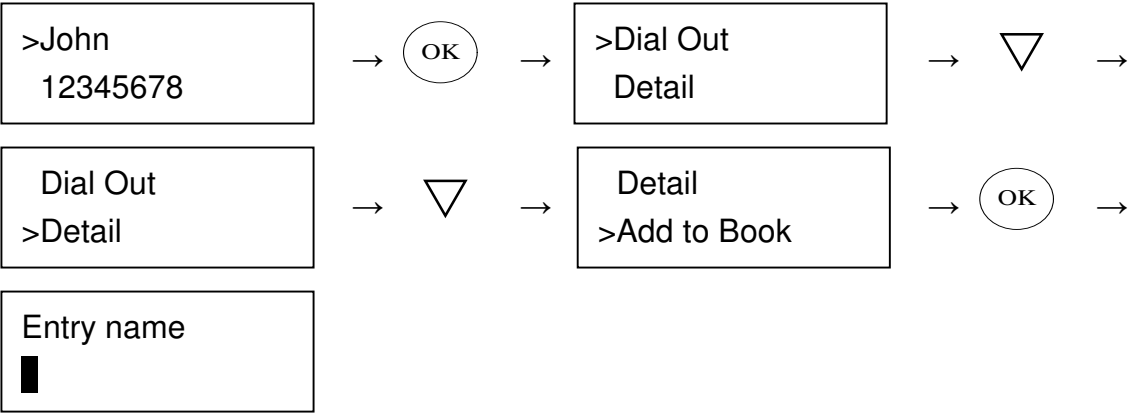
### Detail

The Detail will show the date and time for the calls as following:

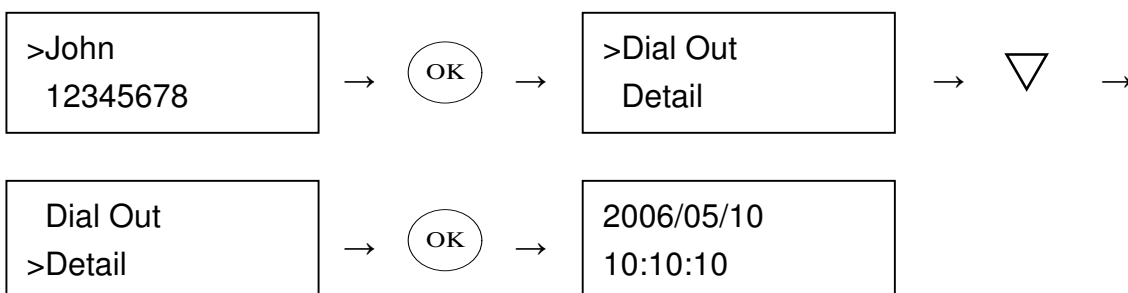


### Add to Phone

This allow user add the unknown number into the phone book. After the new entry added, show all the entries in the phone book to verify by users. If users press the  button, the flow will be just like the actions in the phone book



### Delete

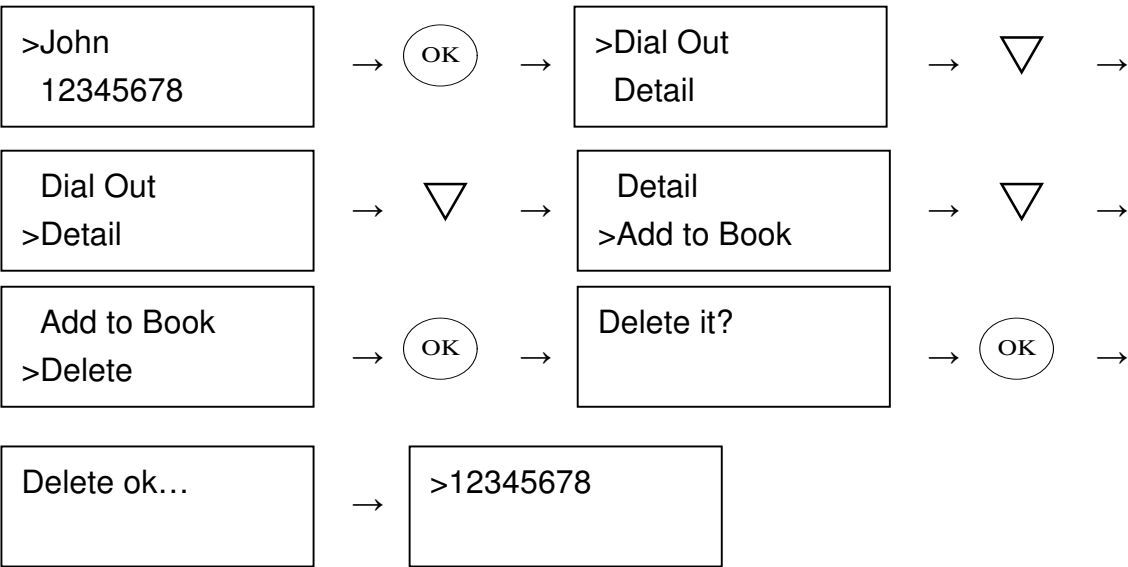

## 1.2 Dialed Calls


All the LCD displaying or actions are as same as the flow of Received. Please check out the chapter 6.1 for the detail as above.

## 1.3 Missed

All the LCD displaying or actions are as same as the flow of Received. Please check out the chapter 6.1 for the detail as above.

## 1.4 Delete All

This will delete all the records of the received, dialed and missed calls.

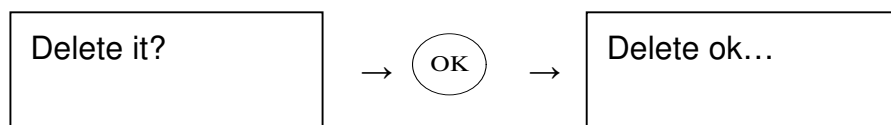

# 2 Phone Book

This phone set could support 90 entries of the phone book. Users could add, modify, delete, and dial out all the entries in the phone book. If the name and number had been added in the phone book, the LCD has to show the name if it is the incoming call.

In the view mode, the name has to be sorted by the characters.

- New Entry
  - Input Name
  - Input Number
- View Entry
  - Phone Book List
    - ◆ Dial Out
    - ◆ Modify Entry
      - Entry Name
      - Entry Number
    - ◆ Delete Entry
      - Delete it?
    - ◆ Detail
- Search Entry
  - Input Name
  - Memory Check

## 2.1 New Entry

### Input Name


It could support the number and character typing in this mode.


In the phone book entries, this isn't permitted for the same name. If users enter the different number with the same name, the LCD will show as following:

Input Name  
Joh█

Overwrite Entry?


This is allowed the same number with the different name. For the name of the incoming call displaying, the phone set will show up the latest record configured by users.

This isn't permitted for the empty info about the name in this mode. If users press the  button without any info for the name, the LCD will show as following and return to the New Entry table after a few seconds:

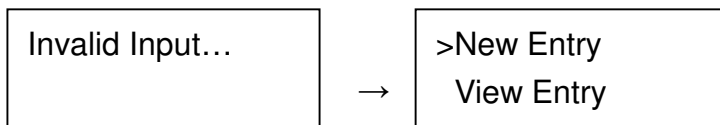

### Input Number

After users enter the valid name for the New Entry, the LCD will show as following and it only supports the number typing in this mode:

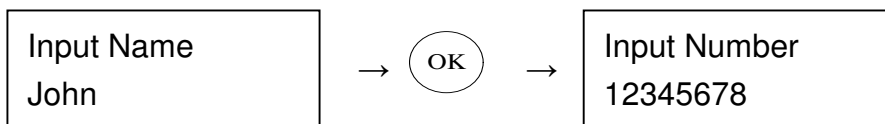


After saving the name and number for the new entry, LCD will show up the exist records:

>123  
ABC  
John

## 2.2 View Entry

In this mode, the phone has to sort the name by the characters. The priority of sorting just like this: Number > Uppercase character > Lowercase character.


>123  
ABC  
Bob  
alex  
jason

Users could press the  button to select the action in the view mode.

If there is no any entry for the phone book, LCD will show the message as following:

No Records!!


### Dial Out

Press  on specific phone book entry, phone will be off-hook and dial out automatically.

### Modify Entry

Here user can modify name and number of existed phone book data.

### Delete Entry

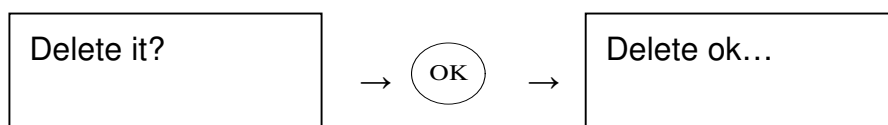


## Detail

Press to see detail name and number of this phone book entry.


### 2.3 Search Entry

This mode could support the numbers or characters typing. If the entered name couldn't be matched with the existed records, on LCD will show the first entry of this phone book.

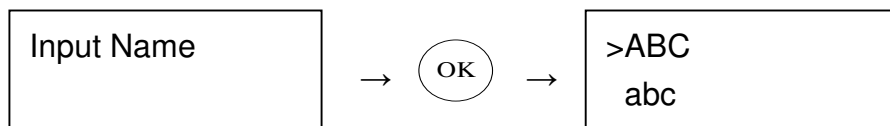

### 2.4 Memory Check

Phone set could support about 90 entries for the phone book; it will show the records for the unused and used entries.

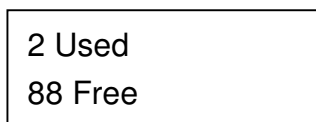

## 3 Networking Setting

- IP Mode
  - Fixed

DHCP

PPPoE

- IP Address
- Net Mask
- Default GW
- DNS Setting
  - Primary DNS
  - Second DNS
- PPPoE
  - ID
  - Password
  - Reconnect
  - SNTP
- SNTP
  - Server IP
  - Time Zone
  - Mode

### 3.1 IP Mode

Press the  or  button to select the IP mode.

### 3.2 IP Address

Enter IP address for Fixed IP mode. Under this mode can only input digits.

IP Address:  
10.1.1.3

### 3.3 Net Mask

All the operation is just like the IP Address configuring. It will be shown as following from the LCD:

IP Mask:  
255.0.0.0

### 3.4 Default GW

All the operation is just like the IP Address configuring. It will be shown as following from the LCD:

Default GW:  
10.1.1.254

If users input the invalid value for the IP address, Net Mask or Default Gateway, LCD will show as following and return to the original setting of this configuration table:

Invalid Input...

### 3.5 DNS Setting

#### 3.5.1 Primary DNS

It supports the number typing in this table only.

Primary DNS:  
168.95.192.1

### 3.5.2 Second DNS

It supports the number typing in this table only.

Second DNS: 168.95.1.1
---------------------------

## 3.6 PPPoE

### 3.6.1 ID

It could support the number or character typing in this mode.


User Name: pppoe
---------------------

### 3.6.2 Password

For the protecting policy, LCD will use the asterisk to replace the info showing.

Password: *****
--------------------

For the password modify displaying, the LCD will clean all the asterisks and showing the cursor as following:

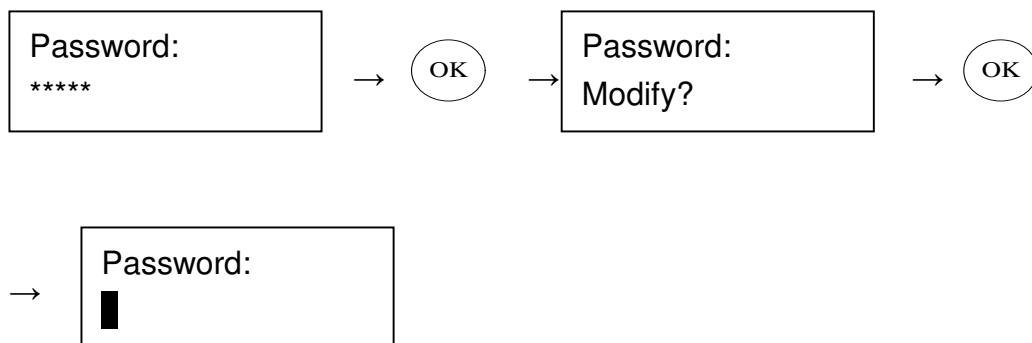

### 3.6.3 Reconnect

Please press the button  or  to enable or disable this function.

## 3.7 SNTP

### 3.7.1 Mode

Please press the button  or  to enable or disable this function.

>ON

OFF

### 3.7.2 Server IP




To enter SNTP server IP address. It supports the number typing and Domain typing.

Server IP:  
168.95.195.12

Or

Server IP:  
time.nist.gov

### 3.7.3 Time Zone

Pressing the  for decreasing and  for increasing the zone value. The  button will save the changed.

Zone:  
GMT +8:00

## 4 SIP setting

All the menu operations are as same as the Networking setting.

- Proxy Setting
  - Proxy IP
  - Proxy Port
  - OutPx IP
  - OutPx Port
- User Setting
  - ID

- Password
- Phone Num

## **4.1 Proxy Setting**

### **Proxy IP**

It could support the number and character typing for the IP or domain.

Proxy IP: 10.1.1.2	or	Proxy IP: proxy.com
-----------------------	----	------------------------

### **4.1.2 Proxy Port**

Configuring the Proxy port in this table; it could only support the number typing. The max value is 65535.

Proxy Port: 5060
---------------------

### **4.1.3 OutPx IP**

This is the setting for the Outbound Proxy. It could support the number and character typing for the IP or domain.

OutPx IP: 10.1.1.2	or	OutPx IP: outpx.com
-----------------------	----	------------------------

### **4.1.4 OutPx Port**

This could only support the number typing only. The max value is 65535

OutPx Port: 5060
---------------------

## **4.2 User Setting**

### **4.2.1 ID**

It could support the number or character typing for the ID.


RegID: 100
---------------

### 4.2.2 Password

It could support the number or character typing for the ID. LCD will show the asterisks to replace the password.

RegPwd:  
\*\*\*

For the modify displaying, the LCD will empty the all the asterisks and showing the cursor as following:

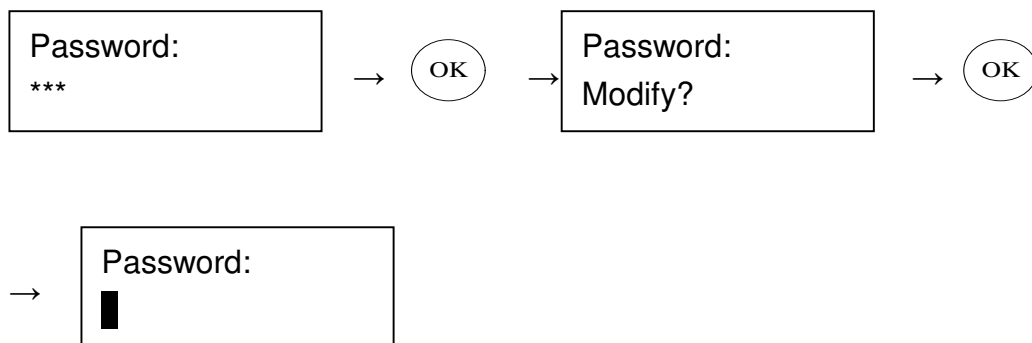

### 4.2.3 Phone Num

It could support the number typing only from LCD management. (If you want to input characters, you can input it from WEB management and Telnet command line.)

PhoneNum:  
100

## 5 Phone Setting

- Alarm Setting
  - Add
  - View All
  - Del All
- Ring Setting
  - Ringer Volume
    - ◆ Volume 1
    - ◆ Volume 2
    - ◆ Volume 3
    - ◆ Volume 4

- Ringer Melody
  - ◆ Melody 1
  - ◆ Melody 2
  - ◆ Melody 3
- Forward setting
  - Busy
  - No Answer
  - Unconditional
  - Disable All
- Time setting
  - User defined time.

## 5.1 Alarm Setting

There are some definitions for the Alarm clock, please check out the detail as following:


If the alarm clock had been set and the time is up:

- The phone will be ring in the IDLE and MENU state only.
- If the phone isn't in the IDLE or MENU state, the phone will ring while the state back to the IDLE or MENU.
- If the state don't return to the IDLE or MENU for 30 minutes, the clock will cancel and don't ring the phone.
- Ringing the phone every 20 seconds.
- For the ringing tone, depends on the ring melody setting.
- Stop ringing until users pick up the phone set or hand free.


### 5.1.1 Add


This phone set could support 3 entries for the Alarm.


If all the three entries had been taken, LCD will show the message as following and back to the original page:

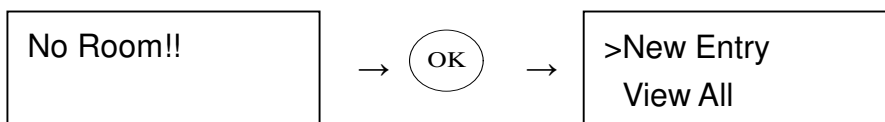

If users enter the incorrect month or date, please show the message as following and back to the original page:

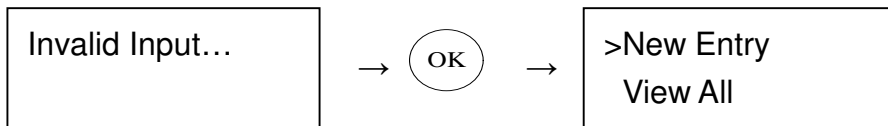

Switch to the Time setting while users press the  button in the Date setting:

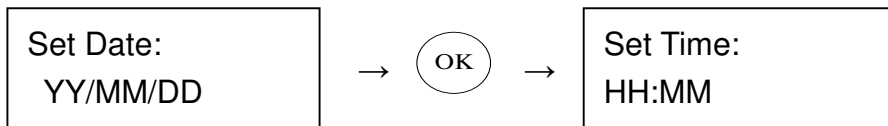


The entire format for the date and time are as following:

Year: 2000 ~ 2099; Month: 01 ~ 12; Date: 01~31; Hour: 00 ~ 23;


Minute: 00~59

The schedule will be everyday while user didn't enter the date for the alarm clock.


The format of the time setting is as following:

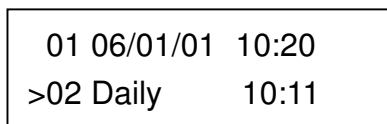

### 5.1.2 View All

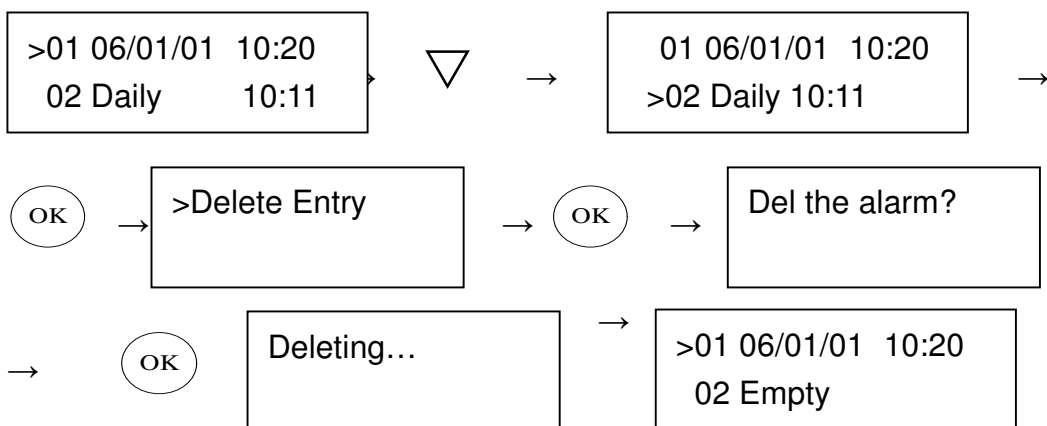

### 5.1.3 Del All

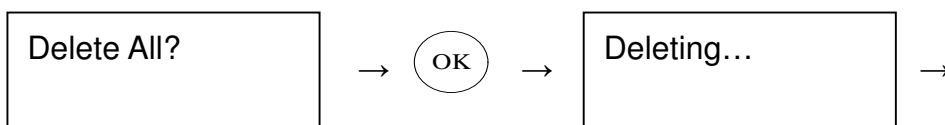

>View All  
Delete All

## 5.2 Ring Setting

### 5.2.1 Ringer Volume

There are four levels for the volume adjustment and the default is level 2.

The symbol ">" will point out the current level for this phone set.


Pressing the ▽ and △ button to select the volume level for the ring.



While users stop the selection for 1 second, phone will play the ring to verify the ring volume.

### 5.2.2 Ringer Melody

This phone set could support four types of ring melody. (The fourth melody is empty now.)

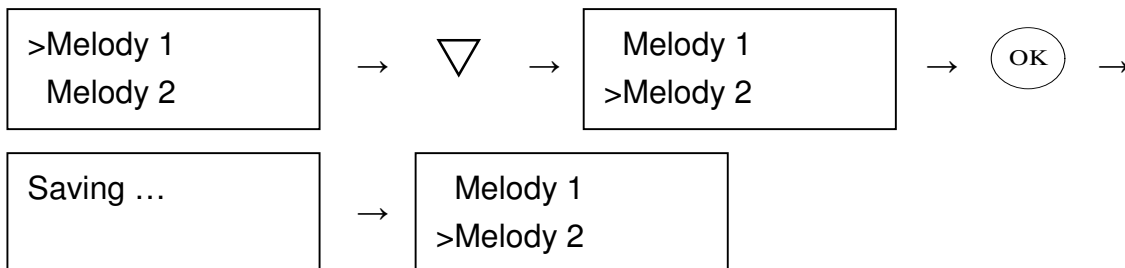

## 5.3 Forward setting

### 5.3.1 Busy

Sets Busy Forward number when user is busy, it will automatically forward to this number.

### 5.3.2 No Answer

Sets No Answer Forward number, when someone calls to LP388 and LP388 doesn't pick up. After 20 seconds LP388 will automatically forward to this number.

### 5.3.3 Unconditional

Sets Unconditional Forward number when someone calls to LP388, LP388 will direct

forward to this number.

#### 5.3.4 Disable All

Delete the all data of Busy/ No Answer/ Unconditional Forward.

### 5.4 Time setting

User can define time from this item. (SNTP function must be disabled first.)

Set Time:  
01/01/01 00:00

## 6 Mail Box

- Information
- MailBox No.
- MailBox Key
- Voice Mail Dial

### 6.1 Information

If VMS LED lights up, you can view voice mail information from this item. Below:

Information:  
2 new, 1 old

### 6.2 MailBox No.

User can change speed number for VMS button. (Default: \*98) User must contact to PX administrator to get Voice Mail number.

### 6.3 MailBox Key

On this item user also can define hotkey dialing to Voice Mail. (Default: \*\*7) It means while you dial \*\*7 it can automatically dial \*98 to Voice mail.

### 6.4 Voice Mail Dial

When you on this item, you can press OK button dialing to Voice Mail.

## 7 Function Keys

- New Entry
  - Input Number
  - Press the key...

- From PhoneBook
  - Phone Book List
  - Press the key...
- View Entry
  - Function Key list
    - ◆ F1:
    - ◆ F2:
    - ◆ F3:

Users could configure the Function Keys for the speed dial or special IP-PBX function. For the function keys configuration, users could input the new number or select the entries from the Phone Book.

### **7.1 New Entry**

Set function key number and key button. User needs to input number first and then defines which key to match the number.


### **7.2 From PhoneBook**

User can define one phone book data to match memory function key, so that user can press function key to do speed dial.

### **7.3 View Entry**

The view mode could only for the entries showing. If users want to modify the entry, please add the New Entry or change Phone Book configurations.

## **8 Reboot**

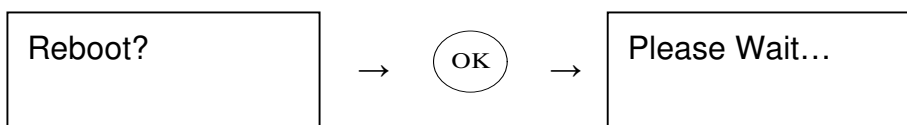

## **Chapter 5 Configuring the SIP Phone through Web Pages**

The HTTPD web management interface provides user an easier way to configure rather than command line method through TELNET.

The configuration function and steps are similar with the way through command line. Please refer to the chapter 4-Configuring the SIP Phone through Telnet command lines for more detail information. Below is a guide for user to configure via web interface.

## Step 1. Browse the IP Address predefined via Keypad

Please enter IP address (user have to set via LCD menu first) of SIP Phone in web browser. If user failed to set IP address via LCD menu, the **default IP address of SIP Phone is 10.1.1.3**, user can try to connect to SIP Phone via this default IP via web interface.



## Step 2. Input the login name and password


Login name: root / user

**Note:**

Login with “user” only has authority as below:

1. Modify network configuration
2. Modify Phone Book
3. Change login password of “user”
4. Reboot

Password (The same with TELNET): Null (just press confirm, no need to key in password in default value)

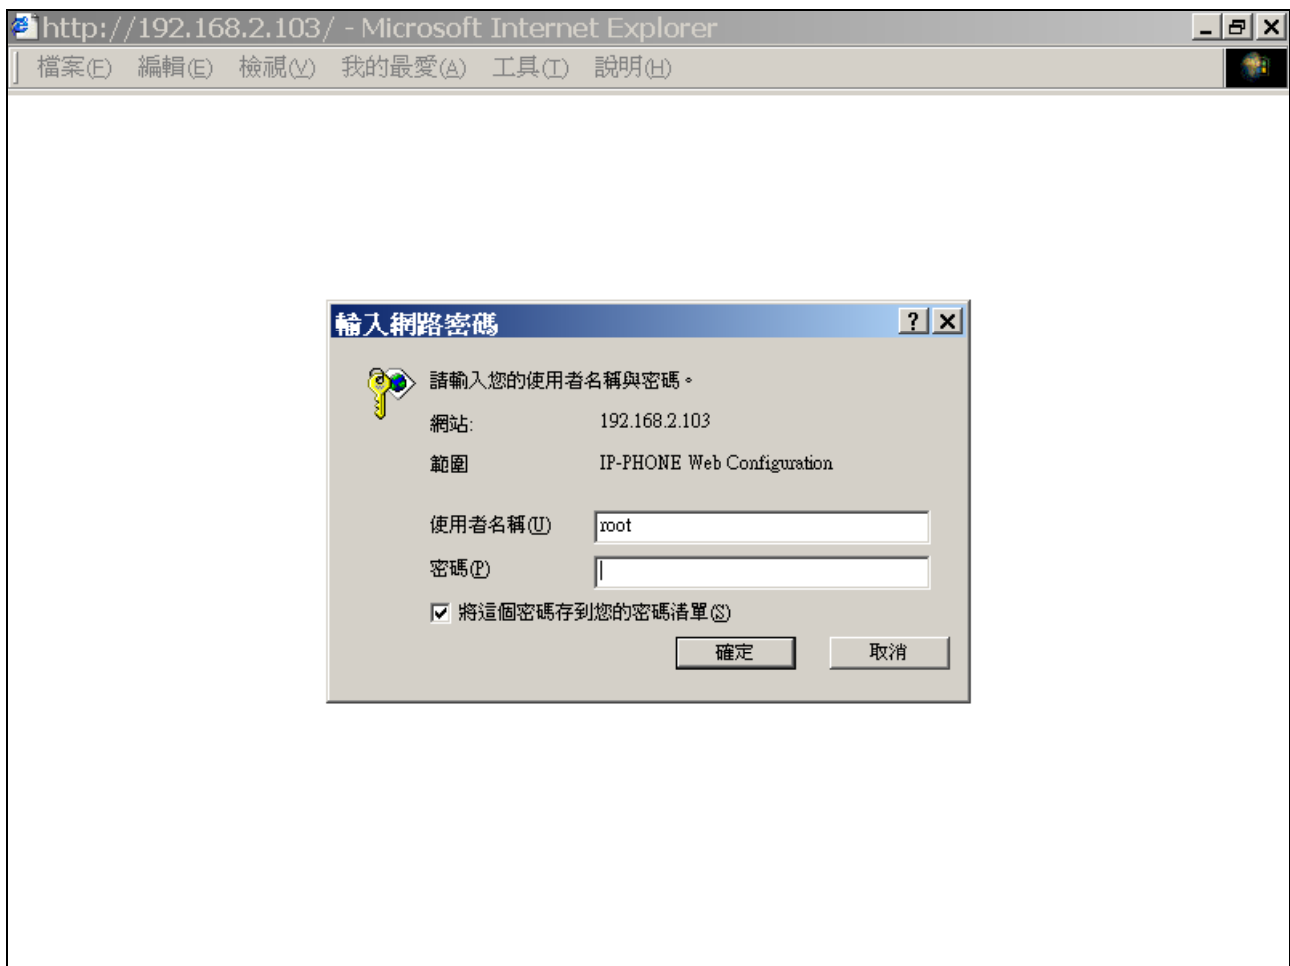

**Note:** User can set password later via web interface.

### Step 3. Enter the web interface main screen

After enter login name and password, user can see web interface main screen as below.



### Step 4. Start to configure

After enter web management interface, user can see four main items.


1. **Installation Wizard:** User can follow steps in wizard to make first-time initial configuration.
2. **Advanced Configuration:** This menu includes other advanced configuration items. Please press triangle figure to list all items below Advanced Configuration.
3. **System Status:** User can check SIP Phone current status here.
4. **Reboot:** After make any change, user has to reboot SIP Phone to apply change.

#### **Button Definition:**


1. **OK:** After change or input any parameter, press this button will save data into SIP Phone.
2. **CANCEL:** Press this button will clean data input by user and restore to original data.
  - (A) **ADD:** Add a new data.
  - (B) **DELETE:** Delete a specific data according to index number.

## 4.1 Installation Wizard

Installation Wizard includes three steps:

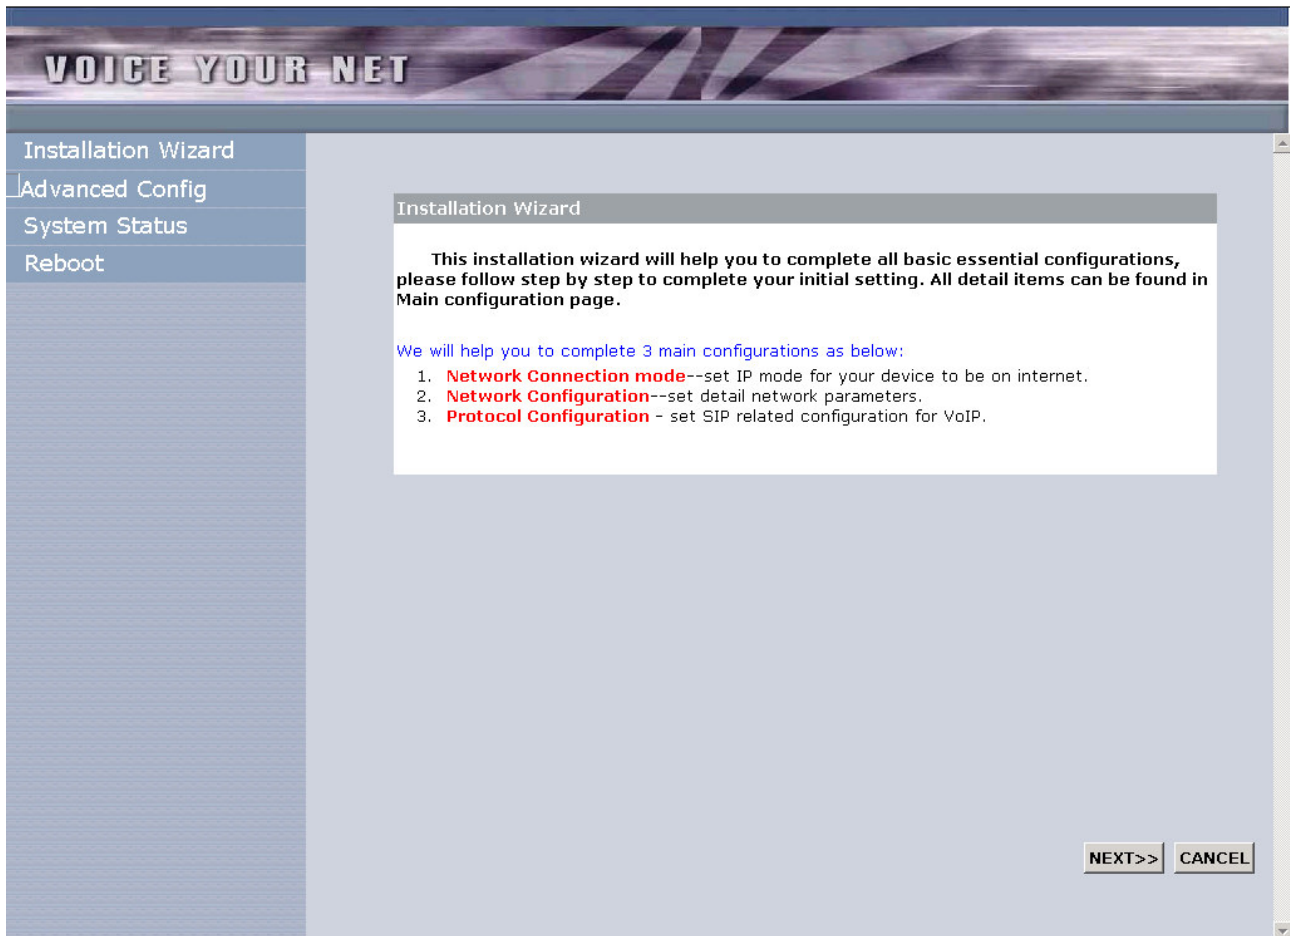

**(A) Network Connection Mode:** User has to select SIP Phone network mode as Static IP, DHCP or PPPoE.

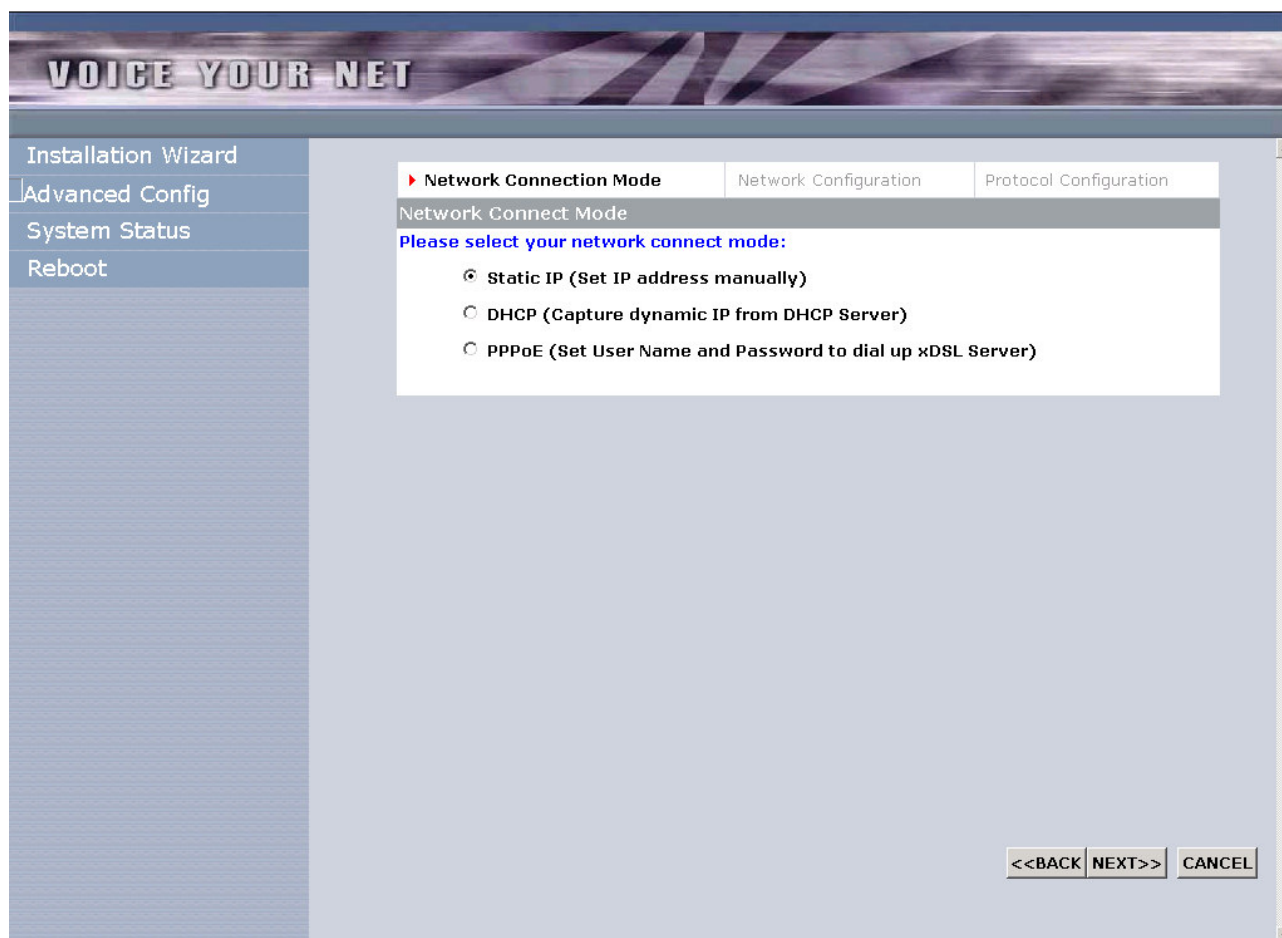

**(B) Network Configuration:** After selecting network connection mode, user has to input related network parameters.

- (1) Static IP: User has to input IP, subnet mask, default gateway, and DNS server address.

The screenshot displays the 'VOICE YOUR NET' network configuration utility. On the left is a sidebar menu with options: 'Installation Wizard', 'Advanced Config', 'System Status', and 'Reboot'. The main window has three tabs: 'Network Connection Mode', 'Network Configuration' (which is active and highlighted with a red arrow), and 'Protocol Configuration'. Below the tabs, the title is 'Network Configuration - Static IP Mode'. A blue instruction text reads: 'Please input all network parameters manually:'. Below this, there are five rows of labels and text input fields:

IP Address	192.168.13.212
Subnet Mask	255.255.248.0
Default Gateway	192.168.8.254
Primary DNS Address	1.1.1.1
Secondary DNS Address	2.2.2.2

At the bottom right of the window, there are three buttons: '<<BACK', 'NEXT>>', and 'CANCEL'.

(2) PPPoE: User has to input PPPoE connection user name and password.

**VOICE YOUR NET**

Installation Wizard  
Advanced Config  
System Status  
Reboot

Network Connection Mode   **Network Configuration**   Protocol Configuration

Network Configuration - PPPoE Parameters

**Please input PPPoE Configuration:**

PPPoE User Name

PPPoE Password

<<BACK   NEXT>>   CANCEL

**(C) Protocol Configuration:** After setting network, user has to set SIP related parameters.

- **Primary Proxy Address and port:** If user select Proxy mode in item A, please input Primary Proxy address and signaling port of Proxy.
- **Secondary Proxy Address and port:** User can also input secondary Proxy server and port for backup.
- **Outbound Proxy Address and port:** User can input outbound Proxy and port if necessary.
- **Phone Number:** Registering Phone number of SIP Phone.
- **Registering Account Name and password:** If Proxy server need registration authentication please input user name and password here.

**VOICE YOUR NET**

Installation Wizard  
Advanced Config  
System Status  
Reboot

Network Connection Mode   Network Configuration   **Protocol Configuration**

**Protocol Configuration**

Please input SIP related parameters below: Mark with \*are essential.

* Primary Proxy Address	<input type="text" value="192.168.32.253"/>	Port: <input type="text" value="5060"/>
Secondary Proxy Address	<input type="text" value="x"/>	Port: <input type="text" value="5060"/>
Outbound Proxy Address	<input type="text" value="x"/>	Port: <input type="text" value="5060"/>
* Phone Number	<input type="text" value="123"/>	
Registering Account Name	<input type="text" value="123"/>	
Registering Account Password	<input type="text" value="123"/>	

<<BACK   OK

## 4.2 Advanced Configuration

### 4.2.1 Network Configuration

#### (1) Network Configuration

Network Connection Mode: User has select network configuration mode first, then configuration page will display related items.

- (a) **Static IP:** If user selects Static IP mode, following items will be displayed.
- **IP Address:** Set IP Address of SIP Phone
  - **Subnet Mask:** Set the Subnet Mask of SIP Phone
  - **Default Gateway:** Set Default routing gateway of SIP Phone
  - **Primary DNS Address:** Set Primary Domain Name Server IP address.
  - **Secondary DNS Address:** Set Secondary Domain Name Server IP address.
  - **HTTP Port for WEB Management:** Set port number for user to configure SIP Phone via WEB management. Default value is 80.

**VOICE YOUR NET**

Installation Wizard

Advanced Config

- Network Configuration
- SIP Configuration
- System Configuration
- Number Configuration
- Media Configuration
- Device Management

System Status

Reboot

Network Configuration Behind NAT SNTP

Static IP Configuration

Network Connection Mode	Static IP (Set IP address manually)
IP Address	192.168.13.212
Subnet Mask	255.255.248.0
Default Gateway	192.168.8.254
Primary DNS Address	1.1.1.1
Secondary DNS Address	2.2.2.2
HTTP Port for WEB Management (1024~65535)	80

OK CANCEL

- (b) **DHCP**: If user selects DHCP mode, following items will be displayed.
- **DNS Server Obtained Mode**: When SIP Phone is in DHCP or PPPoE mode, user can determine DNS address is obtained from server or set manually.
  - **Primary DNS Server**: If user determines to set DNS address manually, please set Primary Domain Name Server IP address here.
  - **Secondary DNS Server**: If user determines to set DNS address manually, please set Secondary Domain Name Server IP address here.
  - **HTTP Port for WEB Management**: Set port number for user to configure SIP Phone via WEB management. Default value is 80.

**VOICE YOUR NET**

Installation Wizard

Advanced Config

- Network Configuration
- SIP Configuration
- System Configuration
- Number Configuration
- Media Configuration
- Device Management

System Status

Reboot

Network Configuration Behind NAT SNTP

**DHCP Configuration**

Network Connection Mode	DHCP (Capture dynamic IP from DHCP Server)
DNS Server Obtained Mode	<input checked="" type="radio"/> Obtain from DHCP Server <input type="radio"/> Set Manually
Primary DNS Address	1.1.1.1 (Optional)
Secondary DNS Address	2.2.2.2 (Optional)
HTTP Port for WEB Management (1024~65535)	80

OK CANCEL

- (c) **PPPoE:** If user selects PPPoE mode, following items will be displayed.
- **DNS Server Obtained Mode:** When SIP Phone is in DHCP or PPPoE mode, user can determine DNS address is obtained from server or set manually.
  - **Primary DNS Server:** If user determines to set DNS address manually, please set Primary Domain Name Server IP address here.
  - **Secondary DNS Server:** If user determines to set DNS address manually, please set Secondary Domain Name Server IP address here.
  - **PPPoE User ID:** Set PPPoE authentication User Name.
  - **PPPoE User Password:** Set PPPoE authentication password.
  - **PPPoE Retry:** Enable/Disable auto-retry function after PPPoE disconnection. If user enables this function, after PPPoE being disconnected, SIP Phone will automatically reboot to re-connect, and after reboot, if SIP Phone still can't get contact with server, SIP Phone will keep trying to connect. After re-connected, SIP Phone will also restart system. On the other hand, if user disables this function, SIP Phone won't reboot and keep trying to connect.
  - **Send PPPoE Echo Request:** Enable or Disable PPPoE Echo function. If user enabled this feature, SIP Phone will send out echo request to check PPPoE connection status. Please notice that if user disables this function, SIP Phone cannot detect if PPPoE connection is still alive or not.
  - **HTTP Port for WEB Management:** Set port number for user to configure SIP Phone via WEB management. Default value is 80.

VOICE YOUR NET

Installation Wizard

Advanced Config

Network Configuration

SIP Configuration

System Configuration

Number Configuration

Media Configuration

Device Management

System Status

Reboot

Network Configuration

Behind NAT

SNTP

PPPoE Configuration

Network Connection Mode

PPPoE (Set User Name and Password to dial up)

DNS Server Obtained Mode

☒ Obtain from PPPoE Server

☐ Set Manually

Primary DNS Address

1.1.1.1 (Optional)

Secondary DNS Address

2.2.2.2 (Optional)

PPPoE User ID

84460791@hinet.net

PPPoE User Password

\*\*\*\*\*

PPPoE Retry

☒ Enable

☐ Disable

Send PPPoE Echo Request

☒ Enable

☐ Disable

HTTP Port for WEB Management (1024~65535)

80

{

OK

CANCEL

## (2) Behind NAT

- **Behind IP Sharing:** Select if enable SIP Phone behind IP Sharing router function.
- **IP Sharing Public IP Address:** Set Public IP Address of IP Sharing router for SIP Phone to work behind IP sharing.
- **STUN Server address:** If user wants to use STUN function, user must enable Behind NAT Device function then inputting STUN Server address.
- **STUN Server port:** If the STUN server port doesn't any restriction, you don't input any port data.

The screenshot displays the 'VOICE YOUR NET' configuration utility. On the left is a sidebar with navigation options: 'Installation Wizard', 'Advanced Config' (selected), 'System Status', and 'Reboot'. The main window has three tabs: 'Network Configuration', 'Behind NAT' (active), and 'SNTP'. Under the 'Behind NAT' tab, the 'Behind IP Sharing Configuration' section contains the following fields:

Behind IP Sharing	<input type="radio"/> Yes <input checked="" type="radio"/> No
IP Sharing Public IP Address	<input type="text" value="192.168.15.205"/>
STUN Server address	<input type="text" value="61.220.2.2"/>
STUN Server port	<input type="text" value="3478"/>

At the bottom of the configuration area are 'OK' and 'CANCEL' buttons.

### (3) SNTP

**SNTP Mode:** Enable / Disable the Simple Network Time Protocol function

**SNTP Server Address:** Set SNTP Server Address.

When SNTP server is available, enable SIP Phone SNTP function to point to SNTP server IP address so that SIP Phone can get correct current time.

**Time Zone-GMT:** Set time zone for SNTP Server time.

User can set different time zone according to the location of SIP Phone. For example, in Taiwan the time zone should be set as 8, which means GMT+8.

The screenshot displays the 'VOICE YOUR NET' configuration utility. On the left is a sidebar menu with the following items: 'Installation Wizard', 'Advanced Config' (expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', 'Device Management', 'System Status', and 'Reboot'. The main window has three tabs: 'Network Configuration', 'Behind NAT', and 'SNTP', with the 'SNTP' tab selected. Under the 'SNTP' tab, there is a section titled 'Static IP Configuration' containing three fields: 'SNTP Mode' with radio buttons for 'On' (selected) and 'Off'; 'SNTP Server Address' with a text box containing 'time.nist.gov'; and 'Time Zone-GMT' with a dropdown menu showing 'GMT+01:00'. At the bottom of this section are 'OK' and 'CANCEL' buttons.

## 4.2.2 SIP Configuration

### (1) SIP Main Configuration

**Primary Proxy Address and port:** If user select Proxy mode in item A, please input Primary Proxy address and signaling port of Proxy.

**Secondary Proxy Address and port:** User can also input secondary Proxy server and port for backup.

**Outbound Proxy Address and port:** User can input outbound Proxy and port if necessary.

**Phone Number:** Registering Phone number of SIP Phone.

**Registering Account Name and password:** If Proxy server need registration authentication please input user name and password here. Registering Account Name and password: If Proxy server need registration authentication please input user name and password here.

The screenshot shows the 'VOICE YOUR NET' SIP Main Configuration window. The sidebar on the left includes 'Installation Wizard' and 'Advanced Config' (selected). The main area displays the 'SIP Main Configuration' tab with the following fields:

SIP Main Configuration	
Primary Proxy Address	192.168.32.253
Port	5060
Secondary Proxy Address	x
Port	5060
Outbound Proxy Address	x
Port	5060
Phone Number	656
Registration Account Name	656
Registration Account Password	*****

At the bottom of the window are 'OK' and 'CANCEL' buttons.

## (2) SIP Advanced Configuration

**Prefix String:** set prefix string. If user ID contains alphabets, user can set it as prefix string here. For example, if Account Name is 123, SIP Phone will sent out messages as Account Name @"IP address of Proxy", if user set prefix as abc, SIP Phone will set out as abc123@"IP address of Proxy". This function is for special proxy server.

**Local Prefix String:** Set Local Prefix String data. When sending register packets or make call, it will add this data on Line number.

**Expire Time:** Set expire time of registration. SIP Phone will keep re-registering to proxy server before expire timed out

**Display Name:** Set SIP Phone display name for caller ID information.

**Local SIP Port:** Set SIP UDP port.

**RTP Port:** Set RTP port for sending voice data.

**Session Expires:** Set Session timer data.

**Mini Session Expires:** Set Mini Session timer data.

The screenshot shows a web interface titled "VOICE YOUR NET". On the left is a navigation menu with "Installation Wizard", "Advanced Config", "System Status", and "Reboot". The "Advanced Config" section is expanded, showing "SIP Main Configuration" and "SIP Advanced Configuration" tabs. The "SIP Advanced Configuration" tab is active, displaying a form with the following fields:

SIP Advanced Configuration	
Prefix String	<input type="text" value="x"/>
Local Prefix String	<input type="text" value="x"/>
Expire Time	<input type="text" value="60"/> Seconds
Display Name	<input type="text" value="x"/>
Local SIP Port	<input type="text" value="5060"/>
RTP Port	<input type="text" value="16384"/>
Session Expires	<input type="text" value="0"/> Seconds
Mini Session Expires	<input type="text" value="0"/> Seconds

At the bottom of the form are "OK" and "CANCEL" buttons.

## 4.2.3 System Configuration

### (1) Feature Configuration:

**Inter Digit Time:** Set the DTMF inter digit time (second). To set the duration (in second) of two pressed digits in dial mode as timed out. If after the duration user hasn't pressed next number, SIP Phone will dial out all number pressed.

**Keypad DTMF Type:** set DTMF type. User can select DTMF type SIP Phone transmits.

**End of Dial Key:** select end of dialing key, e.g. set end of dial key as \* button, after finished pressing dialing number then press \* will dial out.

**No Answer Time:** default: 120 seconds, 0: Off. When someone calls to LP388, but LP388 doesn't pick up, after 120 seconds, LP388 will send 486 message to caller and stops ringing then returns IDLE status.

**Call waiting:** Set to Enable. LP388 can receive the second call when it's on conversation.

**Private Call ID:** Line number will be changed to "Private" when it makes call, but the function must be supported by PX.

**Reject Function:** when receiving "Private" call, it will reject this call.

The screenshot shows the 'VOICE YOUR NET' web interface. On the left is a navigation menu with the following items: Installation Wizard, Advanced Config (expanded), Network Configuration, SIP Configuration, System Configuration, Number Configuration, Media Configuration, Device Management, System Status, and Reboot. The 'System Configuration' item is highlighted. The main content area has two tabs: 'Feature Configuration' (selected) and 'Function Key Configuration'. Below the tabs is a 'System Feature Configuration' dialog box with the following settings:

System Feature Configuration	
Inter Digit Time	5 Second
Keypad DTMF Type	<input type="radio"/> In-Band <input checked="" type="radio"/> RFC2833 <input type="radio"/> SIP Info
End of Dial Key	<input type="radio"/> None <input type="radio"/> * <input checked="" type="radio"/> #
No Answer Time	120 Second
Call Waiting	<input checked="" type="radio"/> ON <input type="radio"/> OFF
Private Call ID	<input type="radio"/> ON <input checked="" type="radio"/> OFF
Reject Function	<input type="radio"/> ON <input checked="" type="radio"/> OFF

At the bottom of the dialog box are 'OK' and 'CANCEL' buttons.

## (2) Function Key Configuration:

**Conference:** Set the Conference mode. Default: Local Conference. But now it is not support Server Conference mode yet!

**Group Pick up:** Set Group Pick up code, you might contact with your IP-PBX system administrator.

**Specific Pick up:** Set Specific Pick up code, you might contact with your IP-PBX system administrator.

F1: User-defined function key.

F2: User-defined function key.

F3: User-defined function key.

Forward: "Local forward". Set Forward type and number.

DND: "Local Do Not Disturb"

MWI: Set support which type Voice Mail. Default: Proxy (NOTIFY).

**VOICE YOUR NET**

Installation Wizard

Advanced Config

Network Configuration

SIP Configuration

System Configuration

Number Configuration

Media Configuration

Device Management

System Status

Reboot

Feature Configuration Function Key Configuration

Function Key Configuration

Conference ☒ Local Conference ☐ Server Conference: x

Group Pick up \*8

Specific Pick up \*9

F1 x

F2 x

F3 x

Forward ☒ Disable ☐ Unconditional: x

☐ No Answer: x ☐ Busy: x

DND ☒ Disable ☐ Enable

☒ OFF

MWI ☐ Client(Subscribe). Subscribe Keep Alive: 1200

☒ Proxy(NOTIFY)

\*Voice MailBox Number: 999

OK CANCEL

## 4.2.4 Number Configuration

### (1) Phone Book

**Add Data:** User can specify 50 sets of phone book via web interface. Please input index, Name, E.164 number, IP Address, port of the destination device, drop prefix, and insert number.

1. name: Specify name for one pbook data
2. e.164: set phone number of callee.

**Delete Data:** User can delete any configured phone book data by index.

**VOICE YOUR NET**

Installation Wizard  
▼ Advanced Config  
Network Configuration  
SIP Configuration  
System Configuration  
Number Configuration  
Media Configuration  
Device Management  
System Status  
Reboot

Phone Book   Hotline   Digit Manipulation

Index	Name	E.164 Number
1	Jason	656

Add New Phone Book

Index	Name	E.164 Number
<input type="text"/>	<input type="text"/>	<input type="text"/>

ADD DELETE

## (2) Hotline

If user set SIP Phone as hotline mode, once SIP Phone is off-hook, it will automatically dial phone number (Proxy Mode) set in hotline table.

The screenshot displays the 'VOICE YOUR NET' web interface. On the left is a navigation menu with the following items: 'Installation Wizard', 'Advanced Config' (which is expanded to show sub-items: 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', and 'Device Management'), 'System Status', and 'Reboot'. The main content area has three tabs: 'Phone Book', 'Hotline' (which is selected), and 'Digit Manipulation'. Under the 'Hotline' tab, there is a label 'Hotline Destination Number' above a text input field containing the character 'x'. Below the input field are two buttons: 'OK' and 'CANCEL'.

### (3) Digit Manipulation

**add:** Add a rule to drop or insert prefix digits of incoming call.

**prefix:** Set which prefix number to implement digit manipulation rule.

**drop:** Enable or disable drop function. If this function is enabled, Phone will drop prefix number on incoming call.

**insert:** Set which digit to insert.

**delete:** Delete a digit manipulation rule by index.

The screenshot shows the 'VOICE YOUR NET' configuration interface. On the left is a sidebar with a tree view containing 'Installation Wizard', 'Advanced Config' (expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', 'Device Management', 'System Status', and 'Reboot'. The main area has three tabs: 'Phone Book', 'Hotline', and 'Digit Manipulation' (selected). Below the tabs is a table with four columns: 'Index', 'Prefix', 'Drop', and 'Insert'. The table contains two rows: Index 1 with Prefix 6, Drop 'Enable', and Insert 'x'; and Index 2 with Prefix 7, Drop 'Disable', and Insert '0'. Below the table is a section titled 'Add New Prefix Rule' with four input fields: 'Index', 'Prefix', 'Drop Prefix', and 'Insert'. The 'Drop Prefix' field has two radio buttons, 'Enable' and 'Disable'. Below these fields are two buttons: 'ADD' and 'DELETE'.

Index	Prefix	Drop	Insert
1	6	Enable	x
2	7	Disable	0

Add New Prefix Rule

Index	Prefix	Drop Prefix	Insert
<input type="text"/>	<input type="text"/>	<input type="radio"/> Enable <input type="radio"/> Disable	<input type="text"/>

ADD DELETE

## 4.2.5 Media Configuration

### (1) Codec

**Codec Priority:** Set codecs priority in order. Please notice that user can set from 1 to 4 codecs as their need. For example, user can only set first priority as 729, and set the others as x, that means only G.729 is available.

**Packet Size:** User can set different packet size for each codec.

The screenshot shows the 'VOICE YOUR NET' configuration interface. On the left is a sidebar with a tree view containing 'Installation Wizard', 'Advanced Config' (expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration' (selected), 'Device Management', 'System Status', and 'Reboot'. The main area has four tabs: 'Codec' (selected), 'Voice', 'Tone configuration', and 'Payload Type'. Under the 'Codec' tab, there are two sections: 'Codec Priority' and 'Codec Configuration'. The 'Codec Priority' section has four rows: 'First' with a dropdown set to 'G.729', 'Second' with a dropdown set to 'G.711U', 'Third' with a dropdown set to 'G.711A', and 'Forth' with a dropdown set to 'G.729B'. The 'Codec Configuration' section has a table with the following data:

	Packet Size
G.729	20
G.711U	20
G.711A	20
G.729B	20

At the bottom of the 'Codec Configuration' section are 'OK' and 'CANCEL' buttons.

## (2) Voice

**Ring Volume:** Adjust the volume of Ringer.

**DTMF Volume:** Adjust the volume of DTMF., Receive (Local side hearing), transmit (remote side hearing), DTMF.

**Echo Cancelor:** Supports G.168/G.165.

**Handset/Headset/Handfree Volume:** Adjust receive voice volume.

(User can press <-, +> button to adjust receive voice volume, under conversation.)

**Handset/headset/Handfree input:** Adjust transmit voice volume  
(If the other side hears echo, you must low handset/headset/handfree input value.)

The screenshot displays the 'VOICE YOUR NET' configuration interface. On the left is a sidebar menu with the following items: 'Installation Wizard', 'Advanced Config' (expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', 'Device Management', 'System Status', and 'Reboot'. The main area has four tabs: 'Codec', 'Voice' (selected), 'Tone configuration', and 'Payload Type'. The 'Voice' tab contains several settings: 'Ring Volume' (7), 'DTMF Volume' (30), 'CNG' (radio buttons for 'Enable' and 'Disable', with 'Disable' selected), and 'Echo Cancelor' (G.168/G.165). Below these are six volume input fields: 'handset volume (0~9)' (10), 'headset volume (0~9)' (4), 'handfree volume (0~9)' (6), 'handset input (0~8)' (4), 'headset input (0~8)' (6), and 'handfree input (0~8)' (6). At the bottom are 'OK' and 'CANCEL' buttons.

Ring Volume	DTMF Volume	CNG	Echo Cancelor
7	30	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	G.168/G.165

handset volume (0~9)	headset volume (0~9)	handfree volume (0~9)	handset input (0~8)	headset input (0~8)	handfree input (0~8)
10	4	6	4	6	6

OK CANCEL

### (3) Tone Configuration

**Ring Back Tone:** Set ring back tone parameters.

**Busy Tone:** Set busy tone parameters.

**Dial Tone:** Set dial tone parameters.

**2<sup>nd</sup> Dial Tone:** Set 2<sup>nd</sup> dial tone parameters.

**Ring Tone:** Set ring tone parameters.

**VOICE YOUR NET**

Installation Wizard  
Advanced Config  
Network Configuration  
SIP Configuration  
System Configuration  
Number Configuration  
Media Configuration  
Device Management  
System Status  
Reboot

Codec Voice **Tone configuration** Payload Type

**Tone Configuration**

	Frequency		Level		First Cycle of Time		Second Cycle of time	
	Low	High	Low	High	On	Off	On	Off
Ring Back Tone	440	480	155	155	2000	4000	2000	4000
Busy Tone	480	620	155	155	500	500	500	500
Dial Tone	350	440	155	155	2000	0	2000	0
2nd Dial Tone	350	440	8	8	25	25	1023	1023
Ring Cadence	Frequency 20		Level 94		On Time 2000		Off Time 4000	

OK CANCEL

#### (4) Payload Type


**RFC2833 Payload Type:** Change RFC2833 Payload type. This is for special request from the other site, if RFC2833 payload types of 2 sites are different, it may cause some problem of connection.

The screenshot displays the 'VOICE YOUR NET' configuration utility. On the left is a vertical navigation pane with the following menu items: 'Installation Wizard', 'Advanced Config' (which is expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', 'Device Management', 'System Status', and 'Reboot'. The 'Advanced Config' section is active, showing a series of tabs: 'Codec', 'Voice', 'Tone configuration', and 'Payload Type'. The 'Payload Type' tab is selected. The main content area is titled 'RTP Payload Type Configuration' and contains a label 'RFC2833 Payload Type' next to a text input field containing the value '101'. Below this input field are two buttons: 'OK' and 'CANCEL'.

## 4.2.6 Device Management

### (1) Login Password

**Change password configuration:** First select login name as root or user, then enter current password, new password and confirm new password again to set new password.

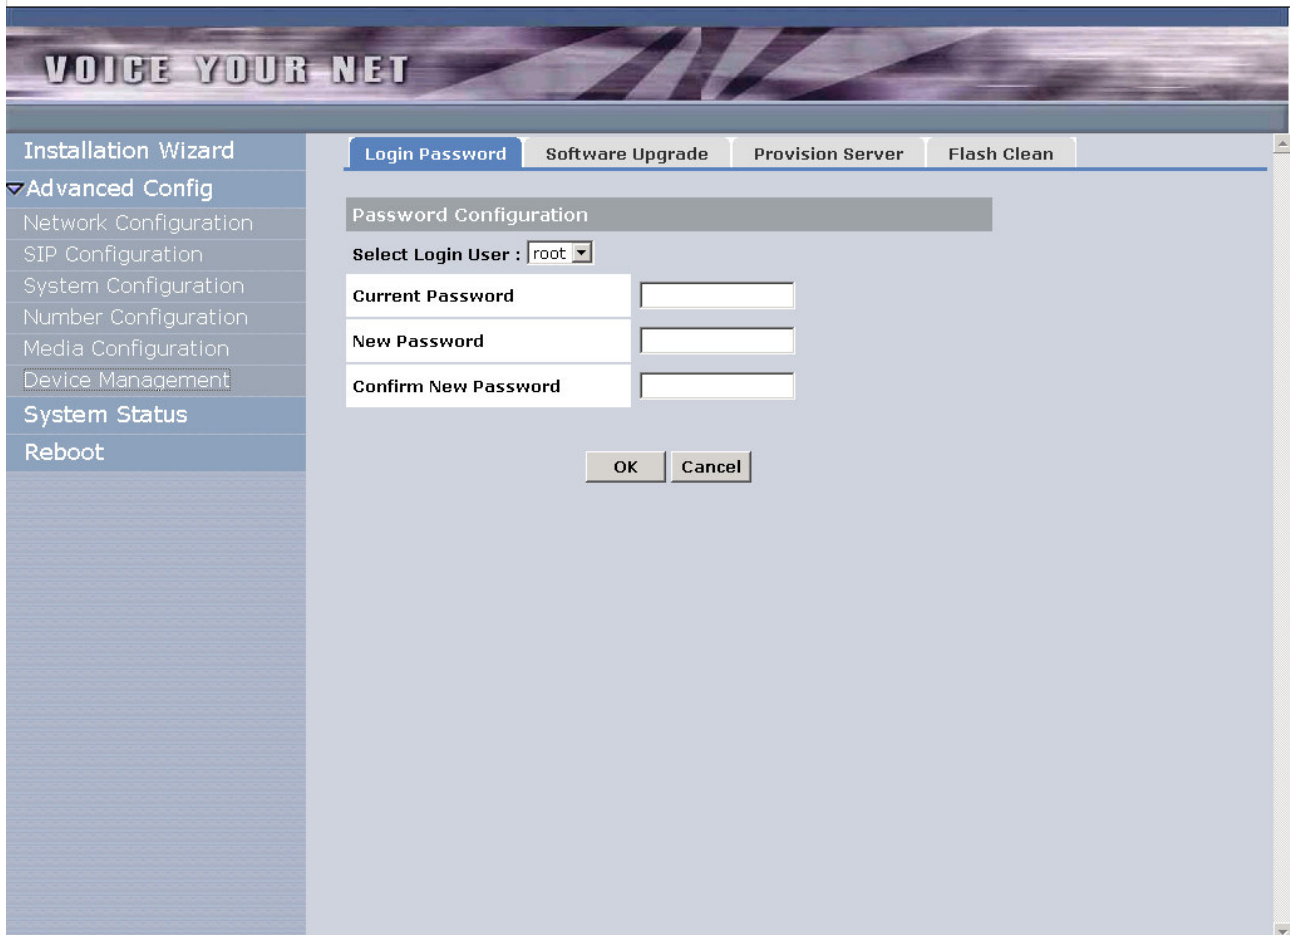

The screenshot displays the 'VOICE YOUR NET' web interface. On the left is a sidebar menu with the following items: 'Installation Wizard', 'Advanced Config' (expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', 'Device Management' (highlighted), 'System Status', and 'Reboot'. The main content area has a tabbed interface with 'Login Password' selected. Below the tabs is a 'Password Configuration' section. It contains a 'Select Login User' dropdown menu with 'root' selected. Below this are three input fields: 'Current Password', 'New Password', and 'Confirm New Password'. At the bottom of the form are 'OK' and 'Cancel' buttons.

## (2) Software Upgrade

**Download Mode:** Select download method as TFTP or FTP

**TFTP/FTP Server IP Address:** Set TFTP server IP address

**FTP Login:** Set FTP login name and password

**Target File name:** Set file name prepared to upgrade

**Target File Type:** Select which sector of SIP Phone to upgrade

### Note:

After upgrade Application, please remember to execute Flash Clean, which will clean all configurations become factory values except Network settings..

The screenshot displays the 'VOICE YOUR NET' web interface. On the left is a navigation menu with the following items: 'Installation Wizard', 'Advanced Config' (expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', 'Device Management', 'System Status', and 'Reboot'. The 'Advanced Config' section is active, showing a sub-menu with 'Login Password', 'Software Upgrade' (selected), 'Provision Server', and 'Flash Clean'. The 'Software Upgrade' page contains the following fields and controls:

- Download Mode:** A dropdown menu currently set to 'TFTP'.
- TFTP/FTP Server IP Address:** A text input field.
- FTP Login:** Two text input fields labeled 'User Name' and 'Password'.
- Target File Name:** A text input field.
- Target File Type:** A dropdown menu currently set to 'Application Software'.
- Buttons:** 'OK' and 'CANCEL' buttons at the bottom.

### (3) Provision Server

**Provision Server Address:** set Provision server IP address.

**Provision Server Login User Name:** set Provision Server login user ID.

**Provision Server Login User Password:** set Provision Server login user password.

**Provision Server Cycle Time:** set Provision Server update cycle time.

The screenshot shows the 'VOICE YOUR NET' web interface. On the left is a navigation menu with the following items: 'Installation Wizard', 'Advanced Config' (expanded), 'Network Configuration', 'SIP Configuration', 'System Configuration', 'Number Configuration', 'Media Configuration', 'Device Management', 'System Status', and 'Reboot'. The 'Advanced Config' section is active, and the 'Provision Server' tab is selected. The main content area is titled 'Software Upgrade' and contains the following fields: 'Provision Server IP Address' (192.168.13.252), 'Provision User Name' (voip), 'Provision User Password' (voip), and 'Provision Cycle Time' (1 Minute). At the bottom of the form are 'OK' and 'CANCEL' buttons.

Tab
Login Password
Software Upgrade
<b>Provision Server</b>
Flash Clean


  

Software Upgrade	
Provision Server IP Address	192.168.13.252
Provision User Name	voip
Provision User Password	voip
Provision Cycle Time	1 Minute

OK CANCEL

#### (4) Flash Clean


- a. **FLASH CLEAN:** FLASH CLEAN will clean all configurations except Network Configuration & SIP Configuration of SIP Phone and reset to factory default value.
- b. **FLASH CLEAN ALL:** FLASH CLEAN ALL will clean all configurations except Network Configuration of SIP Phone and reset to factory default value

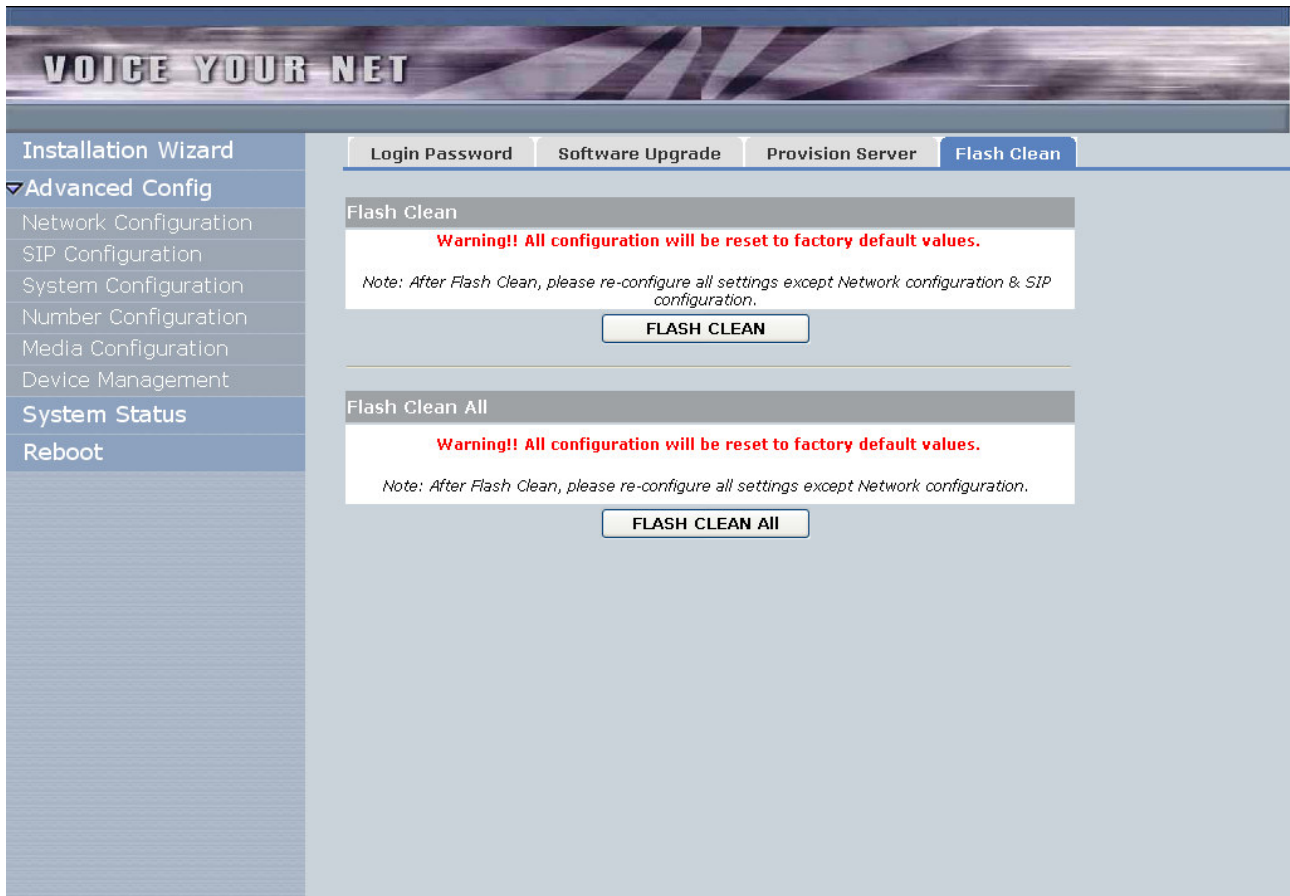

## 4.3 System Status

### 4.3.1 Network Status


Display all current network status of SIP Phone.



The screenshot shows a web interface titled "VOICE YOUR NET". On the left is a navigation menu with the following items: "Installation Wizard", "Advanced Config" (which is expanded), "System Status", and "Reboot". The "Advanced Config" menu is open, showing a list of sub-items. The main content area has two tabs: "Network Status" (selected) and "Version Information". Below the tabs is a table titled "Network Status" with the following data:

Network Status	
Connection Mode	Static IP
Current IP Address	192.168.13.212
Subnet Mask	255.255.248.0
Default Gateway	192.168.8.254
Primary DNS Address	1.1.1.1
Second DNS Address	2.2.2.2
DHCP/PPPoE Server	192.168.8.254
PPPoE Authentication	

**4.3.2 Version Information:**  
Display software version.

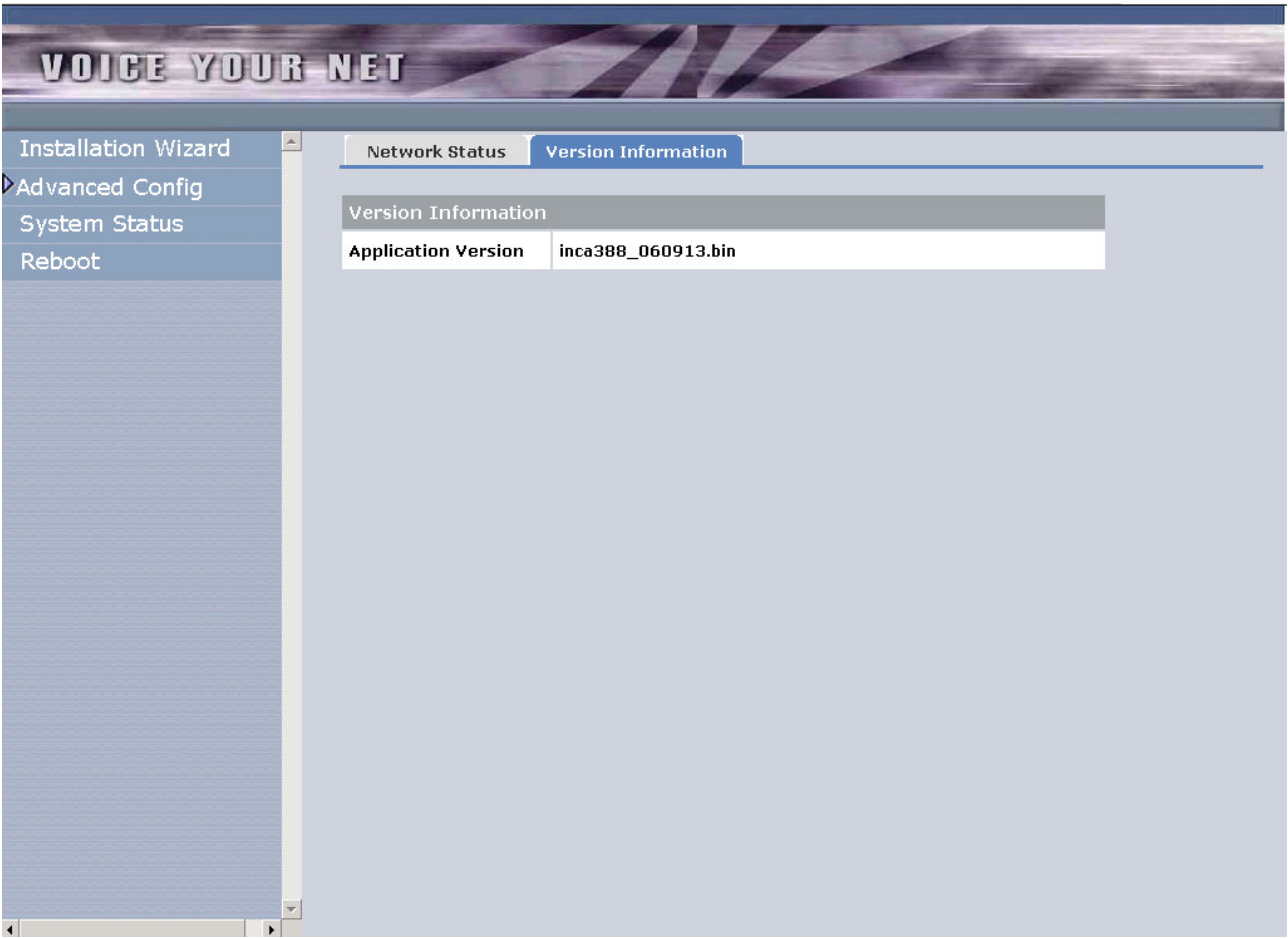


## 4.4 Reboot

Press reboot will reset SIP Phone.

**Note:**

To execute reboot via web browser, SIP Phone will automatically save all data before reboot. To execute reboot via TELNET command, please remember to do **Commit Data** before **Reboot System**.

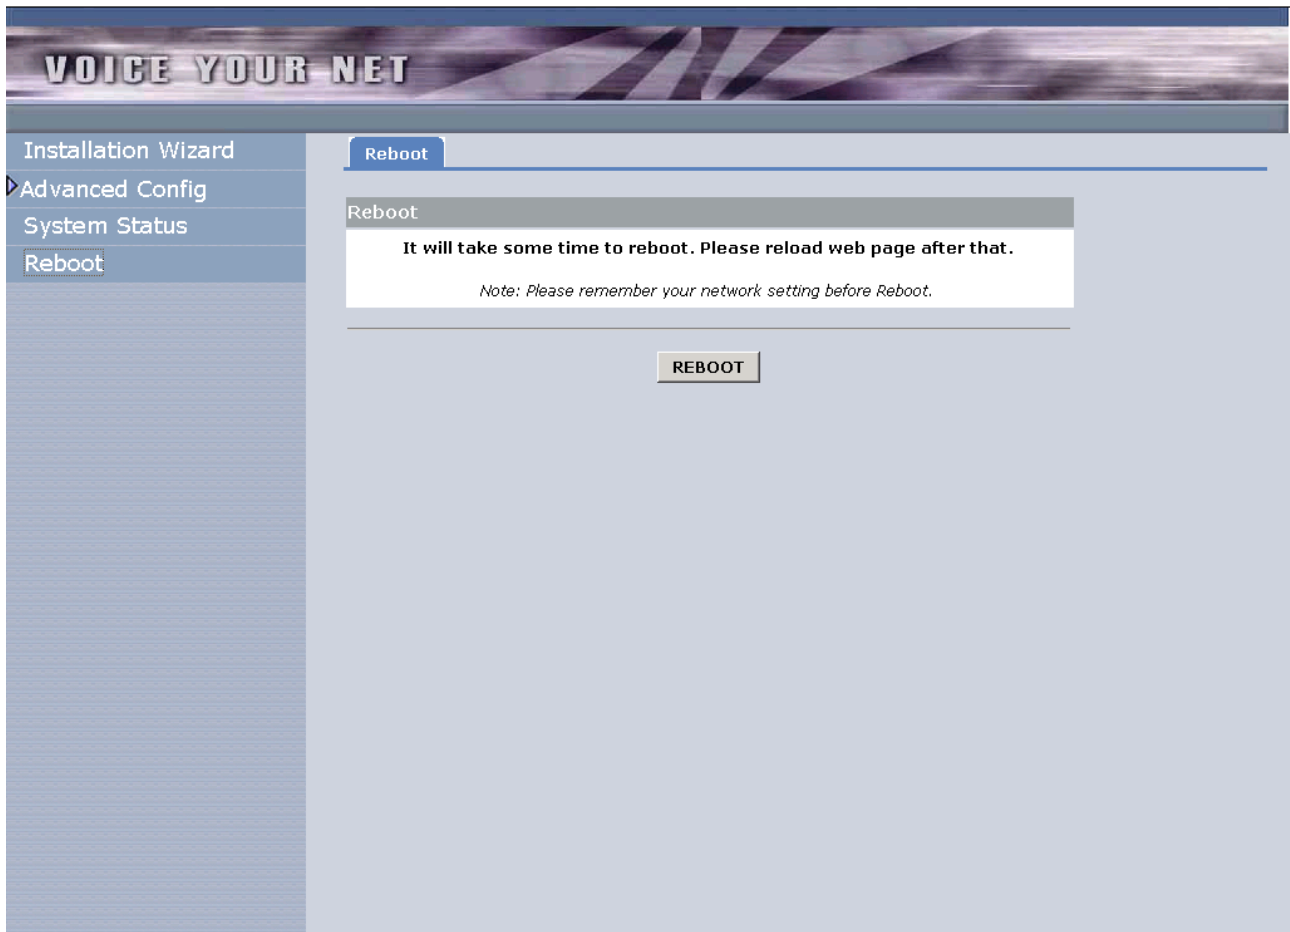

## Chapter 6 Configuring through Telnet command lines

After setting the IP Address of SIP Phone and reboot, (please refer to LCD Menu: 5-3.4.5), user can enter into Telnet command lines.

### Note:

1. After user enter SIP Phone configuration via telnet, please use login: "root", password: null, press enter to enter command lines. If user forgets password, please contact with the distributor, we will generate a specific password according to your MAC address of SIP Phone. MAC address is on a label at the bottom of your case in format with "0001a8xxxxxx".
2. User must input lower-case command, but contents of configurations such as SIP alias or user name etc, user can set as capital case.
3. If user wants to disable or clean any input data, please set value as "x".
4. After any change of configuration, please remember to do **commit** command to save changes and then **reboot** command to reboot system.

### Telnet Commands:

	Command	Description
1	help	help/man/? [command]
2	quit	quit/exit/close
3	debug	show debug message
4	reboot	reboot local machine
5	pbook	Phonebook information and configuration
6	commit	commit flash rom data
7	ping	test that a remote host is reachable
8	time	show current time
9	ifaddr	internet address manipulation
10	pppoe	PPPoE stack manipulation
11	flash	clean configuration from flash rom
12	sysconf	System information manipulation
13	sip	SIP information manipulation
14	security	Security information manipulation
15	line	Line information manipulation
16	voice	Voice information manipulation
17	phone	Setup of call progress tones and ringing
18	tos	IP Packet ToS (Type of Service)values
19	prefix	Prefix drop/insert information manipulation

20	rom	ROM file update
21	auth	Set configuration items for “administrator” user.
22	passwd	Password setting information and configuration

1. After setting the IP Address of SIP Phone 388 and reboot, (please refer to LCD Menu), user can enter Telnet command lines.

**Note:**

2. After user enter SIP Phone configuration via telnet, please use login: “root”, password: null, press enter to enter command lines.
3. If user forget login password, please contact with your distributor, we will generate one new password according to LAN Phone’s MAC address. Please login with “mac” and this new password.
4. User must input lower-case command, but contents of configurations such as SIP alias or user name etc, user can set as capital case.
5. After any change of configuration, please remember to do commit command to save changes and then **reboot** command to reboot system.

## 1. [help] command

Type **help** or **man** or **?** to display all the command lists. The following figure is shown all commands of SIP Phone 388.

	Command	Description
1	help	help/man/? [command]
2	quit	quit/exit/close
3	debug	show debug message
4	reboot	reboot local machine
5	pbook	Phonebook information and configuration
6	commit	commit flash rom data
7	ping	test that a remote host is reachable
8	time	show current time
9	ifaddr	internet address manipulation
10	pppoe	PPPoE stack manipulation
11	flash	clean configuration from flash rom
12	sysconf	System information manipulation
13	sip	SIP information manipulation
14	security	Security information manipulation
15	line	Line information manipulation

16	voice	Voice information manipulation
17	phone	Setup of call progress tones and ringing
18	tos	IP Packet ToS (Type of Service) values
19	prefix	Prefix drop/insert information manipulation
20	rom	ROM file update
21	auth	Set configuration items for “administrator” user.
22	passwd	Password setting information and configuration

## 2. [quit] command

Type **quit**/**exit**/**close** will logout SIP Phone 388 and Telnet Program.

## 3. [debug] command

This command is for engineers to debug system of SIP Phone 388. User can add debug flag via command **debug –add “debug flags”**, and then start debug function via command **debug –open**. When SIP Phone 388 is working on screen will display related debug messages. Most frequently used debug flag are “sip”, “fsm”, “msg”...etc.

```
usr/config# debug
Debug message information and configuration
Usage:
debug [-add type1 [[type2]...]] | -open | -close | -status

    -status    Display the enabled debug flags.
    -add       Add debug flag.
    -delete    Remove specified debug flag.
    -open      Start to show debug messages.
    -close     Stop showing debug messages.
Example:
debug -add sip msg
debug -open
usr/config#
```

## 4. [reboot] command

After typing **commit** command, type **reboot** to restart the SIP Phone 388.

## 5. [pbook] command

SIP Phone 388 can support 90 phone book data.

1. **-print**: display phone book data. User can print all data in phone book by command (**pbook –print**).

2. **-add**: add a new record in phone book table by giving name and e.164 number of callee endpoint. (**pbook -add name "X" e164 "X"**)
3. **-delete**: delete a record of certain listed index in phone book table. (**pbook -delete "index number"**)
4. **-modify**: modify record of a certain index in phone book .  
(**pbook -modify "index" name "X" e164 "X"**)

```
usr/config# pbook

Phonebook information and configuration
Usage:
pbook [-print [start_record] [end_record]]
pbook [-add [name Alias] [e164 phonenumber]]
pbook [-delete index]
pbook [-modify [index] [name Alias] [e164 phonenumber]]

    -print      Display phonebook data.
    -add        Add an record to phonebook.
    -delete     Delete an record from phonebook.
    -modify     Modify an exist record.
Example:
pbook -print
pbook -add name Test e164 1001
pbook -delete 3
pbook -modify 3 name Test e164 1001

usr/config#
```

## 6. [commit] command

Save any changes after configuring the SIP Phone 388.

```
usr/config# commit

This may take a few seconds, please wait....
SymConfigCommit,sysFlashSet...

Commit to flash memory ok!
usr/config#
```

## 7. [ping] command

Command **ping** can test which the IP address is reachable or not.

Usage: ping "IP address"

The message will display packets transmitting condition or no answer from the IP address.

```
usr/config# ping
usr/config# ping 168.95.1.1

PING 168.95.1.1: 56 data bytes
64 bytes from 168.95.1.1: icmp_seq=0. time=45. ms
64 bytes from 168.95.1.1: icmp_seq=1. time=45. ms
64 bytes from 168.95.1.1: icmp_seq=2. time=45. ms
64 bytes from 168.95.1.1: icmp_seq=3. time=45. ms
----168.95.1.1 PING Statistics----
4 packets transmitted, 4 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 45/45/45
usr/config#
```

## 8. [time] command

When SIP Phone 388 enable SNTP function and be able to connect with SNTP server, type **time** command will show the current time retrieved from SNTP server.

```
usr/config# time

Current time is FRI SEP 15 02:28:50 2006

usr/config#
```

## 9. [ifaddr] command

Configure and display the SIP Phone 388 IP information.

1. **-print:** print out all current configurations of ifaddr command.
2. **-ip, -mask, -gate:** Set SIP Phone 388 IP Address, subnet mask and default gateway respectively.
3. **-ipmode:** Set SIP Phone network mode to be Fixed IP, DHCP or PPPoE.

When User set IP mode to be fixed IP, please set IP, subnet Mask, default gateway as mentioned in item 2.

If User set IP mode to be DHCP, SIP Phone will search for DHCP server to capture IP address after reboot.

If user set IP mode to be PPPoE, please remember to set related parameters under **[pppoe] command**.

4. **-sntp:** When SNTP server is available, enable SIP Phone 388 SNTP function and assign SNTP server IP address so that SIP Phone can capture current time from SNTP server. (**ifaddr -sntp 1 "xxx.xxx.xxx.xxx"**)
5. **-autodns:** specify the way to obtain DNS server address. When phone is under DHCP or PPPoE mode, user can let phone to capture DNS server address from server automatically or specify the address manually.

6. **-dns:** User can set primary and secondary Domain Name Server IP address. Once SIP Phone can connect with DNS server, user can specify URL address instead of IP address for Proxy Server and phone book IP address...etc. (**ifaddr -dns 1 “primary DNS server address” -dns 2 “secondary DNS server address”**)
7. **-timezone:** User can set different time zone according to the location SIP Phone is. For example, in Taiwan the time zone should be set as 8, which means GMT+8. (GMT+8: **ifaddr -timezone 8**)
8. **-timeformat:** Set time display format as 12 or 24 hours. (**ifaddr -timeformat 0/1**, 0 as 24 hours, 1 as 12 hours)
9. **-dateformat:** Set date display rule on LCD. (**ifaddr -dateformat 0/1/2 yy/mm/dd; mm/dd/yy; dd/mm/yy**)
10. **-dhcption:** DHCP option value.
11. **-encrypt:** Encrypt function. (0: OFF/ 1: ON)
12. **-ipsharing:** If SIP Phone 388 is behind a IP-sharing , user must enable IP sharing function and specify public IP address. (**ifaddr -ipsharing 0/1 “public IP address of IP sharing”** , 0 for disable and 1 for enable)
13. **-server:** Set Provision Server address.
14. **-id:** Input ID of Provision server.
15. **-pwd:** Input Password of Provision server.
16. **-emstime:** Set provision cycle time.
17. **-stun:** Input STUN server address. (**ifaddr -stun 1 61.220.2.2**) But you must take notice when you use this function, you must enable “ipsharing” function.
18. **-stunport:** Input port of STUN server.

**Note:**

Some Proxy servers support endpoint behind NAT function, in this case SIP Phone doesn't have to enable IP sharing function, please contact with your Proxy Server vendor for detail information.

```
usr/config# ifaddr

LAN information and configuration
Usage:
ifaddr [-print][[-dhcp used]][-sntp mode [server]]
ifaddr [-ip ipaddress] [-mask subnetmask] [-gate defaultgateway]
ifaddr [-dns index [dns server address]][-encrypt mode]
ifaddr [-autodns used] [-dhcption]

    -print      Display LAN information and configuration.
    -ip         Specify WAN ip address.
    -mask       Set Internet subnet mask.
    -gate       Specify default gateway ip address
    -ipmode     Set get IP mode(0:Fixed IP/1:DHCP/2:PPPoE)
    -sntp       Set SNTP server mode and specify IP address.
    -autodns    Specify the way to obtain DNS Server (0:Manual/1:Auto).
    -dns        specify IP address of DNS Server.
    -timezone   Set local timezone.
    -timeformat Set time format(1:12/0:24)
    -dateformat Set date format(0:yy/mm/dd;1:mm/dd/yy;2:dd/mm/yy)
    -dhcption   DHCP option value.
    -encrypt    Enable the encrypt function (0:OFF/1:ON)
    -ipsharing  Specify usage of an IP sharing device and specify IP address.
    -server     Specify Provision Server IP address
    -id         Specify Provision Server ID
    -pwd        Specify Provision Server password
    -emstime    Specify Provision cycle time
    -stun       Specify STUN Server address(x:disable STUN).
    -stunport   Specify STUN Server port.
    -http       Specify HTTP port for Web Management.(1024~65535)

Note:
Range of ip address setting (0.0.0.0 ~ 255.255.255.255).
SNTP mode (0=no update, 1=specify server IP, 2=broadcast mode).
Example:
ifaddr -ip 210.59.163.202 -mask 255.255.255.0 -gate 210.59.163.254
ifaddr -ipmode 1
ifaddr -sntp 1 210.59.163.254
ifaddr -ipsharing 1 210.59.163.254
ifaddr -dns 1 168.95.192.1
ifaddr -autodns 1

usr/config#
```

## 10. [pppoe] command

1. **-print**: display all current configurations and information.
2. **-id**: to set PPPoE authentication user name.
3. **-pwd**: to set PPPoE authentication password.
4. **-reboot**: Select enable or disable this function. If user enables this function, after PPPoE disconnected, SIP Phone will automatically reboot to re-connect, and after reboot, if SIP Phone still can't connect with server, SIP Phone will keep trying to connect. On the other hand, if user disables this function, SIP Phone won't reboot and keep trying to connect. (**pppoe -reboot 0/1**)
5. **-echo**: to set PPPoE send echo request function or not. Under some ISP sending echo request will cause abnormal behavior for LAN Phone, however, if user disable echo function, when ISP disconnect, LAN Phone will not try to reconnect. Suggest for most ISPs this function need to be enabled. Please refer to **pppoe -reboot** function.

```
usr/config# pppoe

PPPoE device information and configuration
Usage:
pppoe [-print]
pppoe [-id username][-pwd password]

    -print      Display PPPoE device information.
    -id         Connection user name.
    -pwd        Connection password.
    -reboot     Reboot after remote host disconnection.
    -echo       PPPoE Echo Request (0=disable, 1=enable).

usr/config#
```

## 11. [flash] command

This command will clean the configuration stored in the flash rom to default value and reboot the SIP Phone 388.

### Note:

1. After user upgrade new software version, suggested to execute this command to make sure new software work well on SIP Phone 388.
2. a. flash –clean: all data will return factory setting, except Network & SIP configuration.  
b. flash –clean all: all data will return factory setting, except Network configuration.

```
usr/config# flash

Flash memory information and configuration
Usage:
flash -clean      except Network configuration& SIP configuration.
      -cleanall   except Network configuration.

Note:
    This command will clean the configuration stored in
    the flash and reboot it.

usr/config#
```

## 12. [sysconf] command

1. **-print:** display all current configurations.
2. **-idtime:** set the duration(in second) of two pressed digits in dial mode as timed out.  
If after the duration user hasn't pressed next number, SIP Phone will dial out all number pressed.
3. **-keypad:** set DTMF type .User can select DTMF type SIP Phone receive and transmit.(**sysconf –keypad 0/1** , 0 for in band ,1 for RFC2833.)
4. **-2833type:** change RFC2833 Payload type.

5. **-eod**: select end of dialing key, e.g. set end of dial key as “\*” button , after finished pressing dialing number then press “\*” will dial out. (**sysconf -eod 0/1/2** , 0 for no end of dial key , 1 for “\*” button, 2 for “#” button )
6. **-privacy**: this function can only work in Japan and also user’s service platform supports Japan standard telecom CLIR specification. When this function is set as Japan mode, other users can hide their caller ID by press special code before dial out phone number.
7. **-phone**: set in SIP message to add user=phone parameter or not. If user enables this function, in SIP message will add this parameter.
8. **-private**: Enable this function. When making call, the line number will be changed to “private”. But PX must be supported this function.
9. **-reject**: when LP388 receive “private” call, LP388 will reject this invite.
- 10 **-ringtime**: Reject the call after the time. (default: 120 seconds. 0: Off)
11. **-waiting**: User can enable or disable Call Waiting function.
12. **-transfer**: User can enable or disable Transfer function.
13. **-pick**: Set Call Group Pick up Code. After setting this code, user can do Group Call Pick Up with this special code.
14. **-spick**: Set Call Specific Pick up Code. After setting this code, user can do Single Call Pick Up with this special code
15. **-lock**: Enable Keypad lock function (default: off. 0/1 off/on)
16. **-lockpwd**: Password of keypad.
17. **-park**: Set Call Park Code. Set special access code for Call Park function.
18. **-mwi**: Enable/Disable MWI function and specify MWI method to be client or server-based. (0: OFF, 1: Client(Subscribe),2: Proxy(NOTIFY))
19. **-mwiexpires**: If user set MWI method as client-based. Here can define the interval time of phone to send subscribe message to check voice mail.
20. **-mwinumber**: Set voice mail box number.
21. **-atanswer**: enable/disable auto answer function of Phone. If this function is enabled, phone will answer incoming automatically.

```
usr/config# sysconf

System information and configuration
Usage:
sysconf [-idtime digit] [-keypad dtmf]
        [-2833type type] [-eod digit]
sysconf -print

-print          Display system overall information and configuration.
-idtime         Inter-Digits time.(1~10 sec)
-keypad         Select DTMF type: 0=In-band,1=RFC2833,2=INFO.
-2833type       RFC2833 Payload Type (range:96~128 inter-used:100,102~105)
-eod            End of Dial Digit setting(0: NONE, 1: *, 2: #)
-privacy        Privacy Number Type(0: NONE, 1: Japan)
-phone          Add the parameter user=phone(0: OFF, 1: ON)
-waiting        Enable the Call Waiting Function(0: OFF, 1: ON)
-transfer       Enable the Call Transfer function(0: OFF, 1: ON)
-pick           Call Group Pick up Code
-spick          Call Specific Pick up Code
-park           Call Park Code
-mwi            Enable the MWI subscription function
                (0: OFF, 1: Client(Subscribe),2: Proxy(NOTIFY))
-mwiexpires     MWI Subscription Keep Alive for Client(default:1200 sec)
-mwinumber      Voice MailBox Number
-mwikey         Voice MailBox Hot Key(default:*69)
-atanswer       auto answer incoming call(0: OFF, 1: ON)
Example:
sysconf -keypad 0 -eod 2

usr/config#
```

## 13. [sip] command

1. **-print:** display all current configurations.
2. **-px:** set proxy server IP address or URL address (**sip -px "IP address or URL of Proxy server"**).
3. **-px2:** set alternative proxy server IP address or URL address. If phone failed to register first proxy, it will try to register this alternative proxy.
4. **-pxport:** set listening port of Proxy server.
5. **-outpx:** set IP address of outbound proxy server. After user set outbound proxy, all packets form SIP Phone will be sent to outbound proxy server.
6. **-prefix:** set prefix string. If user ID contains alphabets, user can set it as prefix string here. For example, if Account Name is 123, SIP Phone will sent out messages as Account Name @ "IP address of Proxy", if user set prefix as abc, SIP Phone will set out as [abc123@"IP address of Proxy"](#). This function is for special proxy server.
7. **-lprefix:** Set Local Prefix String data. When sending register packets or make call, it will add this data on Line number.
8. **-line:** identify one number for the SIP Phone 388 to register to the Proxy (**SIP -line "line number"**).

**Note:** In proxy mode please remember to set user account information under security command.

9. **-display:** user can define LCD panel message.

10. **-billing:** Billing function just support specific PX.( SIPPX 6200)
11. **-billinum:** The number for billing.
- 12.**-expire:** set expire time of registration. SIP Phone will keep re-registering to proxy server before expire timed out.
- 13.**-port:** set listening UDP port or SIP Phone.
- 14.**-rtp:** set RTP port number. SIP Phone will use this port to send and receive voice.
- 15.**-sexpire:** set the session timer.
- 16.**-minse:** set the mini session timer.

```
usr/config# sip

SIP stack information and configuration
Usage:
sip [-px address] [-prefix prefixstring] [-billnum number]
    [-pxport ProxyPort][-outpx address][-line number]
    [-expire t1] [-port udpPort] [-rtp rtpPort]
sip -print

    -print      Display SIP stack information and configuration.
    -px         Proxy server address. (Proxy IPv4 address or Proxy dns name)
    -px2        Secondary Proxy server address. (IPv4 address or dns name)
    -pxport     Proxy server port. (the port of proxy)
    -px2port    Secondary Proxy server port. (the port of Secondary proxy)
    -outpx      OutBound Proxy server address. (Proxy IPv4 address or Proxy dns
                name(specify as null))
    -prefix     Specify prefix string, use it when UserID contains alphabets
                (if UserID uses numerals, specify as null)
    -lprefix    Local prefix string
    -line       TEL Phone number.
    -display    Display name string
    -billing    Enable billing(0: OFF, 1: ON).
    -billnum    The number for billing.
    -expire     The relative time after which the message expires(0 ~ (2^31-1))
    -port       SIP local UDP port number, Default: 5060
    -rtp        RTP receive port number (2326~65534), Default: 16384
    -sexpire    The session timer(Session-Expires) are used to keep the session
    -minse      The mini timer are used to keep the session
                active(Default: 0 don't support timer,range:90 ~ (2^31-1))

Example:
    sip -px 210.59.163.171 -line 70

usr/config#
```

## 14. [security] command

1. **-print:** display all current configurations.
2. **-name:** set user ID of SIP Phone 388 for registering. User can set user name and password for registering. If password is no need, please set user name the same as line number or SIP Phone won't register successfully.
3. **-pwd:** set account password for registering.

```

usr/config# security

Security information and configuration
Usage:
security [-name username] [-password password]
security [-print]

-print          Display system account information and configuration.
-name          Specify user name.
-pwd           Specify password.
Example:
security -name 1001 -pwd 1001

usr/config# █

```

## 15. [line] command

1. **-print**: display all current configurations.
2. **-fwd**: set forward function.

There are three selections in Forward type, user must select under which condition to forward calls.

### (1) **Busy Forward**

When SIP-Phone is in busy status, the incoming call will be forwarded to the assigned phone number.

### (2) **No Response**

When SIP-Phone hasn't been picked up for around 10 seconds, the incoming call will be forwarded to the assigned phone number.

### (3) **Unconditional**

It is included the above two types. Whether the SIP-Phone is in which status, calls will be automatically forwarded to the assigned phone number.

3. **-hotline**: set hotline number.('X' for disable)

```

usr/config# line

Gateway line information and configuration
Usage:
line -print      Gateway line information.
line -fwd        Forward type and number.
                  1:unconditional
                  2:busy
                  3:no answer
line -hotline    Set Hot line information('x' for disable).
Example:
line -print
line -fwd 1 1001
line -fwd 2 x
line -hotline 628

usr/config# █

```

## 16. [voice] command

The voice command is associated with the voice codec setting information.

1. **-print**: display voice codec information and configuration.
2. **-send**: three voice packet size can be configured as 20 ms, 40 ms or 60 ms.
3. **-priority**: set codecs priority in order. Please notice that user can set from 1 to 5 codecs as their need, for example, **voice -priority g711u, voice -priority g729 711a g711u** means SIP Phone can support only one codec or three codecs.
4. **-volume**: There are three types can be adjustable, voice volume, input gain and DTMF volume. Voice volume means the volume user can hear, input gain means the volume the other side can hear from SIP Phone, DTMF means DTMF transmitting volume. (**voice -volume voice "value of volume", voice -volume handsetinput "value of volume", voice -volume dfmt "value of volume"**)
5. **-nscng**: CNG function (0/1: off/ on)

Note: It is for advanced administrator use only. Please ask your distributor before changing any settings of this command.

```
usr/config# voice
Voice codec setting information and configuration
Usage:
voice [-send [G729 ms] [G711U ms] [G711A ms] [G729B ms] ]
      [-volume [handset volume] [headset volume] [handfree volume] ]
      [-volume [ring level] [dtmf volume][sidetone volume] ]
      [-volume [handsetinput value] [headsetinput value] [handfreeinput value] ]
voice -print
voice -priority [G729] [G711U] [G711A] [G729B]

    -print      Display voice codec information and configuration.
    -send       Specify sending packet size.
                G.729 (20/40/60 ms)
                G.711U (20/40/60 ms)
                G.711A (20/40/60 ms)
                G.729B (20/40/60 ms)
    -priority    Priority preference of installed codecs.
                G.729
                G.711U
                G.711A
                G.729B
    -volume      Specify the following levels:
                handset volume (0~9, default: 4),
                headset volume (0~9, default: 4),
                handfree volume (0~9, default: 4),
                ring volume (0~9, default: 7),
                dtmf volume (0~30, default: 30),
                sidetone volume (0~256, default: 15),
                handset input (0~8, default: 4),
                headset input (0~8, default: 6),
                handfree input (0~8, default: 6),
    -nscng       CNG Function. (On=1, Off=0).
Example:
voice -send g729 60 g711u 60 g711a 60 g729b 60
voice -volume handset 7 headset 7 handfree 7
voice -volume ring 7 input 5 dtmf 5 sidetone 45
voice -volume handsetinput 7 handsetinput 7 handfreeinput 7
voice -priority g729 g711u g711a
usr/config#
```

## 17. [phone] command

1. **-print:** Print current call progress tone configurations (ring: ring tone, rbt: ring back tone, bt: busy tone, dt: dial tone). This parameter should be accompanied with tone type.
2. **-ring:** To set RING tone value. The played tone type, when Phone has incoming call.
3. **-rbt:** To set Ring Back Tone value. The played tone type, when Phone dials out a call.
4. **-bt:** To set Busy Tone value. The played tone type, when Phone dials to a destination that is busy.
5. **-dt:** To set Dial Tone value. The played tone type, when hook off the Phone.

```
usr/config# phone

Phone ringback tone , busy tone , dial tone setting and notes
Usage:

phone [-ring [freq ][ringON ][ringOFF ][ringLevel]]
phone [-rbt [freqHi ][freqLo ][freqHiLev][freqLoLev]
      [Tone1ON][Tone1OFF][Tone2ON ][Tone2OFF ]]
      [-bt [freqHi ][freqLo ][freqHiLev][freqLoLev]
      [Tone1ON][Tone1OFF][Tone2ON ][Tone2OFF ]]
      [-dt [freqHi ][freqLo ][freqHiLev][freqLoLev]
      [Tone1ON][Tone1OFF][Tone2ON ][Tone2OFF ]]
      [-flash [freqLo ][freqHi ]]
phone [-print [rbt][bt][dt][flash]]

    -print    Display phone ringing/tone configuration.
              rbt :   ringback tone
              bt  :   busy tone
              dt  :   dial tone
    -ring     ringing configuration set .
    -rbt      ringback tone configuration set .
    -bt       busy tone configuration set .
    -dt       dial tone configuration set .
    -flash    flash configuration set .

Note:
tone    frequency    : 0 ~ 65535 (Unit : Hz)
tone    freqLevel    : 0 ~ 65535 (Unit : mVrms)
tone    Tone ON/OFF  : 0 ~ 8000 (Unit : ms)

Example:
phone -print rbt
phone -ring 20 2000 4000 94
phone -rbt 480 440 8 8 2000 4000 2000 4000
phone -bt 620 480 8 8 500 500 500 500
phone -dt 440 350 8 8 500 1023 1023 1023
phone -flash 100 300

usr/config#
```

## 18. [tos] command

TOS/DiffServ (DS) priority function can discriminate the Differentiated Service Code Point (DSCP) of the DS field in the IP packet header, and map each Code Point to a corresponding egress traffic priority. As per the definition in RFC2474, the DS field is Type-of-Service (TOS) octet in IPv4. The recommended DiffServ Code Point is defined in RFC2597 to classify the traffic into different service classes. The mapping of Code Point value of DS-field to egress traffic priorities is shown as follows.

### 1. High priority with DS-field.

Expected Forwarding (EF)	101110	====>	46 (Decimal System)
Assured Forwarding (AF)	001010	====>	10 (Decimal System)
	010010	====>	18 (Decimal System)
	011010	====>	26 (Decimal System)
100010		====>	34 (Decimal System)

### 2. Low Priority with DS-field:

Assured Forwarding (AF)	001100	====>	12 (Decimal System)
	010100	====>	20 (Decimal System)
	011100	====>	28 (Decimal System)
100100		====>	36 (Decimal System)
	001110	====>	14 (Decimal System)
	010110	====>	22 (Decimal System)
	011110	====>	30 (Decimal System)
	100110	====>	38 (Decimal System)
	000000	====>	0 (Decimal System)

1. **-print** : display all current configurations.

2. **-rtptype**: set DSCP value of signaling packets from 0 to 63

3. **-siptype**: set DSCP value of RTP packets from 0 to 63

#### **Note:**

This command won't be functional until whole network environment support DSCP function, e.g. all routers or switches in your network have enabled DSCP feature.

```

usr/config# tos

IP Packet ToS(type of Service)/Differentiated Service configuration
Usage:
tos [-rtptype dscp]
tos [-sigtype dscp]
tos -print
    [-rtpreliab mode]
tos -print

Example:
    tos -rtptype 7 -sigtype 0

usr/config#

```

## 19. [prefix] command

This command is for digit manipulation.

1. **-add:** Add a rule to drop or insert prefix digits of incoming call.

prefix: Set which prefix number to implement prefix rule.

drop: Enable or disable drop function. If this function is enabled, Gateway will drop prefix number on incoming call.

insert: Set which digit to insert on incoming call.

**Example: prefix -add prefix 100 drop 1 insert 2000**

2. **-modify:** Modify a rule to drop or insert prefix digits of incoming call.

**Example: prefix -modify 100 drop 0 insert 200**

3. **-delete:** Delete a rule to drop or insert prefix digits of incoming call.

**Example: prefix -delete modify 100 drop 0 insert 200**

```

usr/config# prefix

Prefix drop/insert information and configuration
Usage:
prefix -add [prefix number][drop number][insert digits]
prefix -delete index
prefix -modify index [prefix number][drop number][insert number]
prefix -print      Prefix drop/insert information.
    prefix        The prefix of dialed number.
    drop          Drop prefix(Enable:1/Disable:0).
    insert        Insert digits.
Example:
    prefix -add prefix 100 drop 1 insert 2000
    prefix -add prefix 100 drop 1
    prefix -add prefix 100 drop 0 insert 200
    prefix -delete 1
    prefix -modify 1 prefix 100 drop 0 insert 300

usr/config#

```

## 20. [rom] command

1. **-print:** show all current configurations and version information.

## 2. -app: upgrade main application code.

### Note:

After upgrade Application, please remember to execute **flash –clean** command, which will clean all configurations become factory values except IP address.

**-s:** it is necessary to prepare TFTP/FTP server IP address for upgrading firmware rom file.

**-f:** the file name prepared for upgrading is necessary as well.

**-method:** specify download method to be TFTP or FTP(0 for TFTP.1 for FTP)

**-ftp:** specify user name and password for FTP download method.

For example: User prepares to upgrade the latest app rom file – lpsip.100, the TFTP server is 192.168.1.1, User has to input command as below:

**rom –app –s 192.168.1.1 –f lpsip.100**

```
usr/config$ rom
ROM files updating commands
Usage:
rom [-print][-app][-dsptest][-dspcore][-dspapp]
    -s TFTP/FTP server ip -f filename
rom print
    -print      show versions of rom files. (optional)
    -app        update main application code(optional)
    -boot       update main boot code(optional)
    -dsptest    update DSP testing code(optional)
    -dspcore    update DSP kernel code(optional)
    -dspapp     update DSP application code(optional)
    -s          IP address of TFTP/FTP server (mandatory)
    -f          file name(mandatory)
    -method     download via TFTP/FTP (TFTP: mode=0, FTP: mode=1)
    -ftp        specify username and password for FTP
Note:
    This command can run select one option in "app",
    "dsptest", "dspcore", and "dspapp".
Example:
rom -method 1
rom -ftp vwusr vwusr
rom -app -s 192.168.4.101 -f app.bin
rom -boot -s 192.168.4.101 -f boot.bin
usr/config$
```

Command **rom –print** can show current version installed in SIP Phone 388.

```
usr/config$ rom -print

Download Method   : TFTP
Application Rom   : inca388_060913.bin
usr/config$
```

## 21. [auth] command

For security concern, the “root” user can customize some configurable items for

“administrator” user.

1. **-“item name”**: Assign the configurable item for “administrator” user.

**Example:**

**auth -ifaddr 1**

**auth -sip 1**

**auth -voice 1**

Now the Administrator can use these command which Root user assign to them.

2. **-print**: Display the configurable items for “administrator” user.

```
usr/config# auth
Root control what command administrator can use.
Usage:
auth -print Display auth switch configuration.
           Use item name to do config name (0=Disable, 1=Enabled).
Example: auth -ifaddr 1
usr/config#
```

## 22. [passwd] command

For security protection, user has to input the password before entering **application user/config mode**. Two configurations of login name/password are supported by the system.

1. **-set**: set password of “root” users or “administrator” users.

**(passwd -set root/administrator “password”)**

2. **-clean**: clean up password restored before, and user can login :”root/administrator”, password: ”press enter”.

User who requests authorization to execute **all** configuration commands needs to login with “root”. If a user login with “administrator”, commands below are not functional:

```
usr/config# passwd
Password setting information and configuration
Usage:
passwd -set Loginname Password
Note:
Loginname can be only "administrator"
Example:
passwd -set administrator Your_Passwd_Setting
usr/config#
```